

Honeywell Precision Barometer

HPB & HPA



User's Manual

Version H2.4

ADS-14071 Rev. 5/02

Customer Service Representative

(800) 323-8295 fax: (763) 954-2257

E-Mail: ssec.customer.service@honeywell.com

Web Site: www.ssec.honeywell.com

No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of Honeywell, Inc. Honeywell reserves the right to make changes to any products or technology herein to improve reliability, function or design. Honeywell does not assume any liability arising out of the application or use of any product or circuit described herein; neither does it convey any license under its patent rights nor the rights of others.

©Copyright 2001 Honeywell Inc., All rights reserved. Printed in U.S.A.

Table of Contents

1.0 INTRODUCTION	1
1.1 Product Overview	1
1.2 Hardware Description	1
2.0 GETTING STARTED	2
2.1 Overview	2
2.2 Equipment Needed	2
2.3 Terminal Program Settings	2
2.4 Initial Turn-On Response	3
2.5 Command Format	3
2.6 Step-By-Step Examples	3
2.7 Command Functional Groups	5
3.0 COMMANDS - QUICK REFERENCE	7
4.0 FUNCTIONAL OPERATION	11
4.1 Overview	11
4.2 What Is Integration?	12
4.3 Pressure Reading Control	12
4.4 Customized Pressure Range	14
4.5 Command Illustrations	15
4.6 Pressure Reading Decimal Position	18
4.7 HPB Addressing	19
5.0 COMMANDS	22
5.1 Command Format	22
5.2 Information Request Commands	22
5.3 Action Directing Commands	23
5.4 Command Replies—General	23
5.5 ASCII Format Replies	24
5.6 Binary Format Replies	25
5.7 Command And Reply Sequencing	27
5.8 Command Errors	28
5.9 Command Summary Table	29
5.10 Command Descriptions	32
6.0 ELECTRICAL CONNECTIONS	54
7.0 TIMING DIAGRAMS	55
8.0 SPECIFICATIONS	58
9.0 DIMENSIONS	60

Figures

Figure 1. HPB Block Diagram	11
Figure 2. Pressure Reading Control	13
Figure 3. Custom Slope (X=) Options	14
Figure 4. Custom Offset (Z=) Options	14
Figure 5. Integration (I=) Command, Example 1	15
Figure 6. Integration (I=) Command, Example 2	15
Figure 7a. Deadband and Sensitivity (DS) Command Examples	17
Figure 7b. Deadband and Sensitivity (DS) Command Examples	17
Figure 8. Idle Count (IC) Command Example	17
Figure 9. Synchronize Integration Cycles (SI) Command Example	18
Figure 10. HPB Ring Network	19
Figure 11. HPB Multi-drop Network	20
Figure 12. Single HPB Command and Reply	27
Figure 13. Multiple HPB Network Command and Replies	28
Figure 14. HPB Electrical Connector Pin Assignments	54
Figure 15. Connection to a Host Computer	54
Figure 16. Default Single Pressure Reading Timing Diagram	55
Figure 17. Default Continuous Pressure Reading Timing Diagram	55
Figure 18. Continuous Pressure (with IC = 1) Timing Diagram	55
Figure 19. Timing Diagram for 20 Readings Per Second	56
Figure 20. Timing Diagram for 50 Readings Per Second	56
Figure 21. Timing Diagram for 120 Readings Per Second	56
Figure 22. HPB Case Outline	60
Figure 23. Electrical Connector	60

Tables

Table 1. Decimal Place Locations for Pressure Readings	18
Table 2. Header Description for Binary Format Pressure Readings	25
Table 3. Binary Format Character Codes	26
Table 4. Command List	30
Table 5. Command Factory Default List	32
Table 6. Display Units Options	38
Table 7. Transmission Times at Selected Baud Rates	57
Table 8. Number of bytes in Various Replies	57
Table 9. ASCII Conversion Table, Decimal to Hexadecimal	61
Table 10. RS-232 Standard Pin Connections	61

1.0 INTRODUCTION

1.1 Product Overview

The Honeywell Precision Barometer* (HPB) provides high accuracy absolute pressure readings in digital form. The first-time user will be able to use the HPB within minutes, yet capability exists to configure the HPB for optimum performance in specific applications.

The heart of the HPB measuring system is a silicon piezoresistive sensor, which contains both pressure and temperature-sensitive elements. Digital signals representing temperature and pressure are processed by a microprocessor to produce fully temperature compensated and calibrated pressure readings over the entire -40 to 85°C temperature range.

The HPB receives commands and sends data in either a ring or a multidrop TTL-Level configuration. Using an RS232-to-TTL converter, up to 89 units can be connected in a ring or multi-drop configuration to a single serial port of a computer. Group (multicast) addressing allows up to nine groups of HPBs to be addressed with a single command. Global (broadcast) addressing will send a command to all HPBs on the bus.

Any computer having a serial port, terminal emulation software and a RS232-to-TTL converter can be connected to the HPB to allow the user to select baud rates, sample rates, readout resolution, units of pressure and other choices.

User selected functions are set through the digital interface. The selected functions may either be used temporarily, until the HPB is powered down, or may be stored in the internal EEPROM to automatically configure the HPB each time power is applied.

The HPB is a low power device. It can be configured to enter a micropower shut down mode with a simple command or by switching the state of power control line, see the OP command in section 5.10 for details. For buoy applications, the HPB has a wave filtering routine to make data acquisition easier. See the DO command in section 5.10 for details.

1.2 Hardware Description

See Sections 8 and 9.

* For simplicity, references throughout this manual to both HPB & HPA have been shortened to HPB.

2.0 GETTING STARTED

2.1 Overview

The first-time user should approach the HPB in a manner analogous to using a word processor program; i.e., many features are available but one may begin by using those of interest at the moment. Section 2.7 of this manual lists command features by functional groups to assist in this selection. When shipped from the factory, the default settings provide a pressure transducer that will be usable for many applications. Feel free to make command-driven configuration changes as you become familiar with the HPB. Default parameters are restored when the power is cycled. Once the user is familiar with the performance and command structure, changes may be made and stored using the 'Store Parameters' (SP) command. Once stored, the new default settings are activated each time the HPB is powered up. This tailors the personality of the HPB to meet the needs of a particular application.

2.2 Equipment Needed

To prepare the HPB for operation, several items are needed:

- A mating connector with proper wiring connections (see connector part number and wiring diagram in Section 6-Electrical Connections);
- A DC power supply;
- A pressure source;
- A computer, or host processor, having an RS-232 serial port and terminal program software such as PROCOMM™, VERSATERM™, TERMINAL (Windows® 3.x) or HYPERTERMINAL (Windows® 95). These programs are normally used to interface to a modem. The wiring diagram designates which HPB pins must connect to the computer "send", "receive" and "common" pins for proper communications. Some computers may not have an RS-232 serial port connection identical to the one shown in Section 6, making it necessary to adapt the HPB connections to that particular computer.
- An RS232-to-TTL converter

2.3 Terminal Program Settings

- Enter the following settings in the terminal program:

```
Baud Rate..... 9600
Start Bits.....1
Data Bits.....8
Stop Bits.....1
Parity.....None
```

- Attach a line feed to the incoming carriage return <CR>.
- Turn the local echo ON.

When shipped from the factory, the HPB is set to a baud rate of 9600, 1 start bit, 8 data bits with no parity and one stop bit. If the baud rate has been subsequently changed, and is unknown, it will be necessary to search all baud rate values to reestablish communication. See the BP command description in Section 5.10 of this manual for possible settings.

2.4 Initial Turn-on Response

Digital Output

Once the wiring connections and terminal program settings are complete, the HPB will automatically send the following response (or similar to) when power is applied. This reply will be generated any time power is applied to the HPB.

Typical Reply:

```
?01HPB__1200HPAa ring network configuration
?00HPB__1200HPAa multi-drop network configuration
```

The “?01” or “?00” indicates a default address device called a “null address”. This HPB has not yet been assigned an ID number so it assumes the null address.

2.5 Command Format

Any command interaction with the HPB requires electrical connection to the TTL serial communications pins. There are two basic types of commands – action directing commands and information requesting commands. These are described in Commands – Section 5

Typical HPB commands have the form ***ddcc = nnn <cr>**

Where: * is the command header character
dd is the decimal address of the HPB
cc is a command (refer to Commands – Section 5 for a complete description of commands)
= equal sign (required in some commands)
nnn additional characters (required in some commands)
<cr> carriage return is required to end all commands
(do not type, press the ENTER/RETURN key)

2.6 Step-by-Step Examples (*Only for single HPB connection*)

• READ SINGLE PRESSURE

Once the HPB is powered up and connected to a computer, enter the following command:

```
Type: *00P1 <cr>      Response: ?01CP=15.458 (ring)
                                ?00CP=15.458 (multi-drop)
```

Where: * indicates the start of a command
00 is the null address of the HPB (see note below)
P1 is the command to read the most current pressure

Note: The “?” indicates a response from a null address HPB – one which has not been assigned a device ID. A null address, 00, is coded into each HPB at the factory. When a ring networked null address HPB responds, it adds one to its address, hence, the response ‘01’. Refer to the **ID** command in Section 5.10 for a description of addresses and responses.

In the reply, the “01” identifies the individual unit address (range 01-89). The “CP=15.458” indicates a compensated pressure of 15.458 psi. Your unit may not show this specific reading, depending on the applied pressure it is measuring.

• SET DEVICE ID

To give the HPB an assigned address of 01 up to 89, enter the following commands (Assumes the HPB is still null-addressed):

Type: *00WE <cr> This enables the HPB to change a parameter in RAM

Type: *00ID=01 <cr> This sets the null addressed HPB to device ID=01.

Note: The device ID is now used in the command input

Type: *01S= <cr> **Response:** #01S=00052036 (serial number test)

The “#” now replaces the “?” in the header and indicates the HPB response is from an address assigned unit.

Where: * indicates the start of a command
00 is the null address of the HPB
WE is the command to enable a configuration parameter change
ID is the command to change the device address
01 is the assigned HPB address for this example
S= is the command to read the serial number

• READ PRODUCTION DATE

To read the production date, enter the following command:

Type: *01P= <cr> **Response:** #01P=09/26/00

• READ CONTINUOUS PRESSURE

For continuous pressure readings at the factory set default rate of 5 per second, enter the following command:

Type: *01P2 <cr> This enables a continuous stream of compensated pressure readings to flow into the terminal program.

Type: \$*99IN <cr> This is the best way to stop the continuous pressure reading commands. The ‘\$’ character temporarily stops, or suspends, either the continuous pressure or temperature readings. The *99IN command stops the continuous readings.

• CHANGE TO A NEW SAMPLE RATE

Enter the following command:

Type: *01WE <cr> This enables the HPB to change a parameter in RAM.

Type: *01I=M20<cr> This sets the integration time to value 20, which corresponds to an output sample every 2 seconds.

The sample rate will change to one every 2 seconds. I= is an abbreviation for Integration time which determines how long to accumulate pressure samples between readings. Each integration period gathers the data for one pressure reading output (see Section 4.2 What is integration?). The range of integration times can be set by specifying readings per second (I=R45 for 45 readings/sec) or time delay in 100 millisecond intervals (I=M60 for 6 seconds). The factory set integration time is 5 samples per second (I=M2). See Section 5.10, command descriptions, for more detail.

The output data rate can also be altered by use of the idle count (IC) command or by changing the reading rate (RR) command in conjunction with the operating mode (OP) command. See Section 4 for description of these commands.

• REPEAT THE READ CONTINUOUS PRESSURE STEP ABOVE

Notice the slower output rate of one sample every 2 seconds.

• TRY OTHER COMMANDS

Experiment with other commands to become familiar with the command structures. A short overview of each command with input and response examples is shown in Section 3 Commands – Quick Reference. See Section 5—Commands for complete command descriptions. Until an **SP=ALL** command is executed, no changes will be stored in the EEPROM. Cycle the power or send an **IN=RESET** command to revert to previous EEPROM settings.

2.7 Command Functional Groups

• **PRESSURE DISPLAY UNITS**—*HPB reads out psi, in wc, mm Hg, etc.*

DU Set pressure units for output readings—any one of 17 units
U= Specify a user supplied unit of measure

• **TEMPERATURE**

T1 Single °C
T2 Continuous °C
T3 Single °F
T4 Continuous °F

• **RING/MULTI-DROP BUS PARAMETERS**

BP Changes baud rate and parity
ID Assign device ID and group addresses
M= Select alternate message Headers [Multi-Drop]
SI Synchronize Integration cycles among units [Multi-Drop]
TO Set Transceiver Operating parameters

• **OUTPUT READING AND RATE**—*Speed up or slow down output rate*

Single Reading Commands

P1 Single pressure reading...ASCII format
P3 Single pressure reading...binary format
T1 Single temperature reading...°C
T3 Single temperature reading...°F

Continuous Readings Commands

P2 Continuous pressure readings...ASCII format
P4 Continuous pressure readings...binary format
T2 Continuous temperature readings...°C
T4 Continuous temperature readings...°F

Integration Time Commands —*Changes pressure reading response time*

DS Set deadband and sensitivity parameters
I= Set pressure integration time and reading rate
SI Synchronize pressure Integration cycles

Idle Count Command —*Changes pressure reading response time*

IC Set number of idle integration cycles

Reading Response To Changes In Input Pressure—*Filters small changes*

RR Set number of identical readings to skip
OP Transmit all readings or only changed readings

• **FORMAT PRESSURE READINGS**—*Changes data length into host processor*

Binary Format Commands

- P3 Single pressure...binary format
- P4 Continuous pressure...binary format
- OP Set operating mode...binary format checksum...set signed or extended binary output format

ASCII Format Commands

- All readings, except P3, P4 and ~, are ASCII format readings.
- OP Set operating mode...all readings or only changed readings

• **START-UP PARAMETERS**—*Sets the HPB configuration after power is applied*

- WE Enable parameter writes to the RAM or EEPROM
- SP Store RAM parameters to the EEPROM for startup
- MO Specify the power-up message and operating mode

• **PRESSURE NOISE REDUCTION**—*Reduces pressure noise signals*

- DS Set deadband and sensitivity parameters

• **DIAGNOSTIC AND RESET CONTROL**

- IN Performs a software reset of microprocessor
- RS Read status of error indicators
- CK Performs and provides the result of EEPROM checksum
- OP Use pressure reading checksum for binary format

• **USER AND STARTUP MESSAGES**

- A= Store 8 characters of user supplied data
- B= Store 8 characters of user supplied data
- C= Store 8 characters of user supplied data, which can be configured as a watchdog or reset message
- D= Store 8 characters of user supplied data, which can be configured as a watchdog or reset message
- MO Specify the startup header selection

• **HPB UNIT INFORMATION**

- P= HPB production date
- S= HPB serial number
- V= HPB software version number
- ID Assign device ID and group addresses
- M= Read the maximum full scale pressure limit allowed

• **CUSTOMIZE PRESSURE WINDOW**

- F= Customize the full scale pressure limit
- X= Set the slope “m” parameter for user input $mx+b$ control
- Z= Set the offset “b” parameter for user input $mx+b$ control

3.0 COMMANDS—QUICK REFERENCE

		Example Input (1)	Example Response (2)
A=	Data String A		
	Write string A <i>(up to 8 characters, a <cr> indicates end-of-message. More than 8 characters is an invalid write) (Can store info. such as dates, readings, etc.)</i>	*00WE *00A=2-8-95	
		Inquiry *00A=	?01A=2-8-95
BP	Baud Rate and Parity Setting		
	Set parameters <i>(no parity, 1200 baud)</i>	*99WE *99BP=N1200	
B=	Data String B		
	Write string B <i>(up to 8 characters, a <cr> indicates end-of-message, and more than 8 characters will not write to location) (Can store info. such as dates, readings, etc.)</i>	*00WE *00B=123.4567	
		Inquiry *00B=	?01B=123.4567
CK	Check EEPROM		
		Inquiry *00CK	?01CK=OK
C=	Data String C		
	Write string C <i>(up to 8 characters, a <cr> indicates end-of-message, and more than 8 characters will not write to location The C and D string can be used for a watchdog or reset message(see MO command).</i>	*00WE *00C=This_is_	
		Inquiry *00C=	?01C=This_is_
DO	Default Operating Parameters		
	Set DO parameters <i>(factory default setting)</i>	*00WE *00DO=E	
		Inquiry *00DO	?01DO=E0NX
DS	Deadband and Sensitivity Control		
	Set DS parameters <i>set deadband to 20 x 0.005% = 0.10%FS)</i>	*00WE *00DS=20	
		Inquiry *00DS	?01DS=00S0
DU	Display Units Control		
	Set DU parameters <i>(set units to in. Hg)</i>	*00WE *00DU=INHG	
		Inquiry *00DU	?01DU=INHG
D=	Data String D		
	Write string D <i>(up to 8 characters, a <cr> indicates end-of-message, of more than 8 characters will not write to location) The C and D string can be used for a watchdog or reset message (see MO command).</i>	*00WE *00D=A_HP B!!!	
		Inquiry *00D=	?01D=A_HP B!!!
F=	Custom Full Scale Range		
	Set F= parameter <i>(set custom FS range to 10.5psi)</i>	*00WE *00F=10.5	
		Inquiry *00F=	?01F=10.500

Note: See Section 5.10 for complete command descriptions.

		Example Input (1)	Example Response (2)
IC	Idle Count Parameter		
	Set IC parameter <i>(set idle count to 12 , so that 12 output samples are skipped)</i>	*00WE *00IC=12	
	Inquiry	*00IC	?01IC=12
ID	Identification Number		
	Set ID number <i>(set device ID of first null addressed unit to 12)</i>	*00WE *00ID=12	
	Confirmation of ID=12	*12P1	#12CP= 14.32
	Set group number [Ring Network] <i>(set group ID of unit 12 to 95)</i>	*12WE *12ID=95	
	[Ring Network] Group no. inquiry of device ID=12	*12ID	#12ID=95
	[Multi-Drop] <i>(set group ID of unit 12 to 95 with group sub-address of 01)</i>	*12ID=9501	
	[Multi-Drop] Group no. inquiry of device ID=12	*12ID	#12ID=9501
IN	Initialize HPB Microprocessor		
	Stop all current operations <i>(does not affect RAM data)</i>	*99IN	
	Full reset of HPB processor	*99IN=reset	
	Changes to RAM data are lost unless an SP =ALL command was previously issued. (Response is user message, if selected)	?01Pressure_tank_1	
I=	Integration time		
	Set I parameter <i>(set output rate to 50 readings/second)</i>	*00WE *00I=R50	
	Inquiry	*00I=	?01I=R050
M=	Maximum Full Scale Value Allowed		
	<i>(Factory set)</i> Inquiry	*00M=	?01M=0017psia
MO	Power Up Mode		
	Set MO parameter	*00WE *00MO=M1 *00WE	
	Required to save in EEPROM for power-up	*00SP=ALL	
	Inquiry	*00MO	?01MO=X2M1
OP	Operating Mode Parameters		
	Set OP parameter <i>(set to extended binary output mode)</i>	*00WE *00OP=E	
	Inquiry	*00OP	?01OP=ANEW
P1	Pressure, Single, ASCII Format		
	Request compensated pressure	*00P1	?01CP= 14.450
P2	Pressure, Continuous, ASCII Format		
	Request compensated pressure	*00P2	?01CP= 14.450 (repeated)
P3	Pressure, Single, Binary Format		
	Compensated pressure (null address)	*00P3	^@PSA or
	Compensated pressure (assigned address)	*01P3	{@PSA
	<i>(typical response is a ^ or { char plus 4 data bytes that are encoded for computer translation)</i>		

Note: See Section 5.10 for complete command descriptions.

		Example Input (1)	Example Response (2)	
P4	Pressure, Continuous, Binary Format	Compensated pressure (null address)	*00P4	^@P@@ or {@P@@ (repeated)
		Compensated pressure (assigned address) <i>(typical response is a ^ or { char plus 4 data bytes that are encoded for computer translation)</i>	*01P4	
P=	Production Date	(factory set date, mm/dd/yy) Inquiry	*00P=	?01P=09/26/00
RR	Reading Rate	Set RR parameter	*00WE	?01RR=5
		<i>(skip 5 x 100 = 500 readings if identical)</i>	*00RR=5	
		Inquiry	*00RR	
RS	Read Status	Inquiry	*00RS	?01RS=0000
SI	Synchronize Pressure Integration	Synchronize Integration	*01SI	
SP	Store Parameters in EEPROM	Store Parameter	*00WE	
		<i>(store all settings stored in RAM in EEPROM)</i>	*00SP=ALL	
S=	Serial Number	Inquiry	*00S=	?01S=00005137
T1	Temperature, Single, °C	Request Celsius temperature	*00T1	?01CT=24.5 or ?01CT=..
T2	Temperature, Continuous, °C	Request Celsius temperature	*00T2	?01CT=24.5 (repeated)
T3	Temperature, Single, °F	Request Fahrenheit temperature	*00T3	?01FT= 76.1 or ?01FT=..
T4	Temperature, Continuous, °F	Request Fahrenheit temperature	*00T4	?01FT=76.1 (repeated)
T0	Transceiver Operating Parameters	Set multi-drop response delay to 2 character times	*01WE *01T0=2	#01TO=M2C
			Inquiry *01T0	
U=	User Supplied Display Units	Set display units	*00WE	*00DU=USER ?01U=5.100
		<i>(set units to 5.1 x psi)</i>	*00U=5.100	
		Activate user display units	*00WE	
		Inquiry	*00U=	
V=	Version Number	Inquiry	*00V	?01V=H2.4E0Mnn

Note: See Section 5.10 for complete command descriptions.

		Example Input (1)	Example Response (2)
WE	Write Enable to EEPROM or RAM		
	Write several RAM parameters (example to set output units to cm water column) (factory default setting) (Cancel continuous WE=RAM command)	*01WE=RAM *01DU=CMWC *01DO=E *01WE=OFF	
	<i>Note:</i> Any command changes in RAM will be lost when the PPT is powered down unless an SP command saves them to EEPROM.		
X=	Slope - User Compensation Control		
	Set X= parameter (set user slope control to 0.005% x 17 = 0.085%FS)	*00WE *00X=17	
	Inquiry	*00X=	?01X=17
	<i>Note:</i> The input slope and offset control are for user supplied mx+b correction.		
Z=	Offset - User Compensation Control		
	Set Z= parameter (set mx+b pressure offset to 20 x 0.005%FS = 0.1%FS) (null adjust output at zero pressure)	*00WE *00Z=20 *00Z=CAL	
	Inquiry	*00Z=	?01Z=20

- (1) A carriage return, <cr>, should follow each input. If the HPB has an established address of 12, for instance, then begin the command with *12.. instead of *00..
- (2) The responses shown here begin with ?01.. and are for a null address HPB. That is, a HPB that has not yet established unit identification (see ID command). If the HPB has an assigned address of 23, for instance, the response will begin with #23.. instead of ?01..

Note: See Section 5.10 for complete command descriptions.

4.0 FUNCTIONAL OPERATION

4.1 Overview

Honeywell's Precision Pressure Barometer (HPB) is based on a silicon piezoresistive sensor coupled with a microprocessor and other electronic circuitry. The Piezoresistive sensor contains both pressure sensitive and temperature sensitive elements. After testing the sensor over a matrix of pressure and temperatures at the factory, values are stored in the EEPROM and used by the microprocessor to correct for any sensor non-linearities. Because of the internal digital circuitry, having a digital output capability is straight forward. The digital readings are transmitted via TTL-level signals in either a ring or multi-drop configuration. When connected to a computer via an RS232-to-TTL converter, the user can modify the pressure reading rate, integration times, units of pressure, thresholds for deadbands, etc.

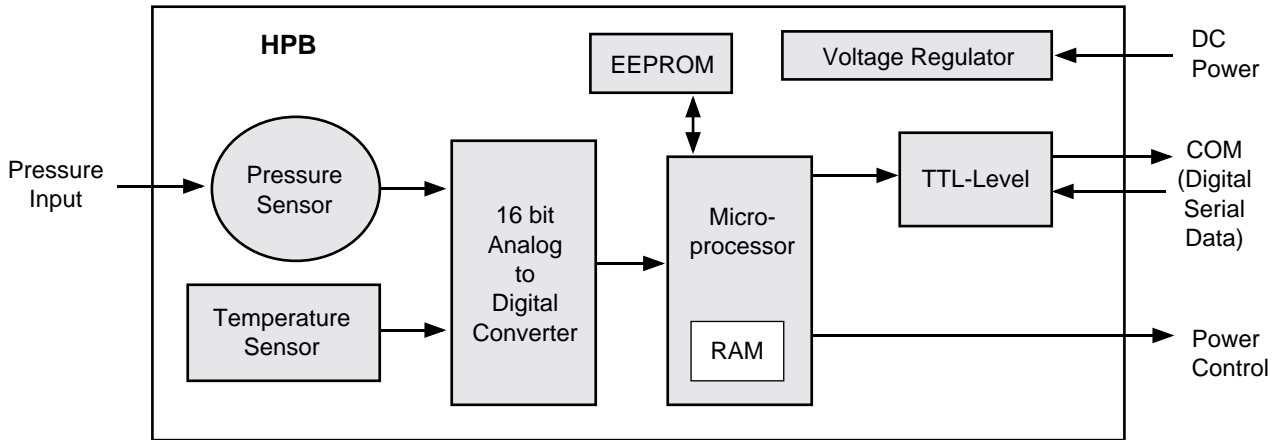


Figure 1. HPB Block Diagram

The HPB can be tailored to specific application requirements. Configuration information is sent to, or read from, the HPB by user command messages over the serial port. Most configuration parameters that can be changed by a command may be retrieved by use of that same command. Commands used to change parameters must be preceded by an enabling command (**WE**), but commands used to retrieve information do not require an enable. All configuration changes are stored in the HPB RAM for immediate use until power is removed. These configuration changes are only made permanent in the EEPROM when the user executes the Write Enable (**WE**) command followed by the EEPROM Store Parameters (**SP**) command. (Exceptions to this are the **A=**, **B=**, **C=**, and **D=** commands, which are immediately stored to EEPROM if preceded by the **WE** command.)

The HPB is a low power device. It can be configured to enter a micro-power shut down mode by either sending a simple command (**See OP=O Command**) or by applying +5V to the "power control pin" on the electrical connector.

If the micro-power mode was entered with a simple command, normal operation is restored by momentarily grounding the power control pin. If the HPB was configured to enter a micro-power state by applying +5V to the power control pin (**See OP=P Command**), normal operation is restored by permanently grounding the power control pin.

4.2 What Is Integration?

The input pressure is converted to an analog electrical signal at the pressure sensor. This signal feeds into a delta-sigma analog-to-digital (A/D) converter where it is changed into a digital signal representing the pressure value. During the A/D conversion cycle, the signal is integrated over time. That is, the pressure reading is averaged (integrated) over the A/D conversion cycle so the resultant digital value is the summation of the average pressures observed during the cycle. This conversion cycle can be controlled by the user with the Deadband and Sensitivity (**DS**), Synchronization Integration (**SI**), Idle Count (**IC**), and Integration (**I=**) commands.

4.3 Pressure Reading Control

The HPB commands allow considerable flexibility in tailoring pressure acquisition times, sample windows, thresholds, and output rates. These are controlled by five commands: Deadband and Sensitivity (**DS**), Integration (**I=**), Idle Count (**IC**), Reading Rate (**RR**), and OPerating mode (**OP**). Figure 2 illustrates how the user may control these attributes in three ways:

First, the internal analog-to-digital converter integration time may be controlled over a range of 1 sample every 12 seconds up to 120 samples per second. This is controlled using the 'Integration' (**I=**) command. The integration time is used to control the A/D integration cycle that allow noisy pressure inputs to be filtered, or averaged, over a selected period of time. See Figures 5. The integration time can be set within a range of 1 to 120 samples/sec using the **I=Rn** form or a range of 100msec to 12 sec/sample using the **I=Mn** form. The values for 'n' range from 1 to 120 for both the rate (**Rn**) form and the millisecond (**Mn**) form.

Second, the integration cycles may be spaced with idle periods that cause pressure reading times to increase to only as one every 51 minutes. The Idle Count (**IC**) command will skip from 0 to 255 idle periods equal to the integration time. If the integration time is set to the maximum, 12 sec/sample, and an idle count of 255 is selected, then the time between samples = 12 sec. x 256 = 51.2 minutes.

Third, the reading rate may be controlled so pressure readings are obtained only when pressure changes occur. The Reading Rate (**RR**) command can be set to output only changed readings, or skip from 100 to 1000 identical readings. The Operating Mode command (**OP**) can be set to output every reading or to only output changes. The Deadband setting in the **DS** command can filter a small pressure change by not allowing the pressure reading to vary as long as it remains within the deadband limits. This controls the sensitivity to change of the **RR** and **OP** command modes when the 'output only when pressure changes' options are selected. If the pressure signal is stable within the deadband limit, then the pressure reading time can be increased up to 1000 times the integration time by using the **RR** command.

HPB Pressure Rate Conditioning

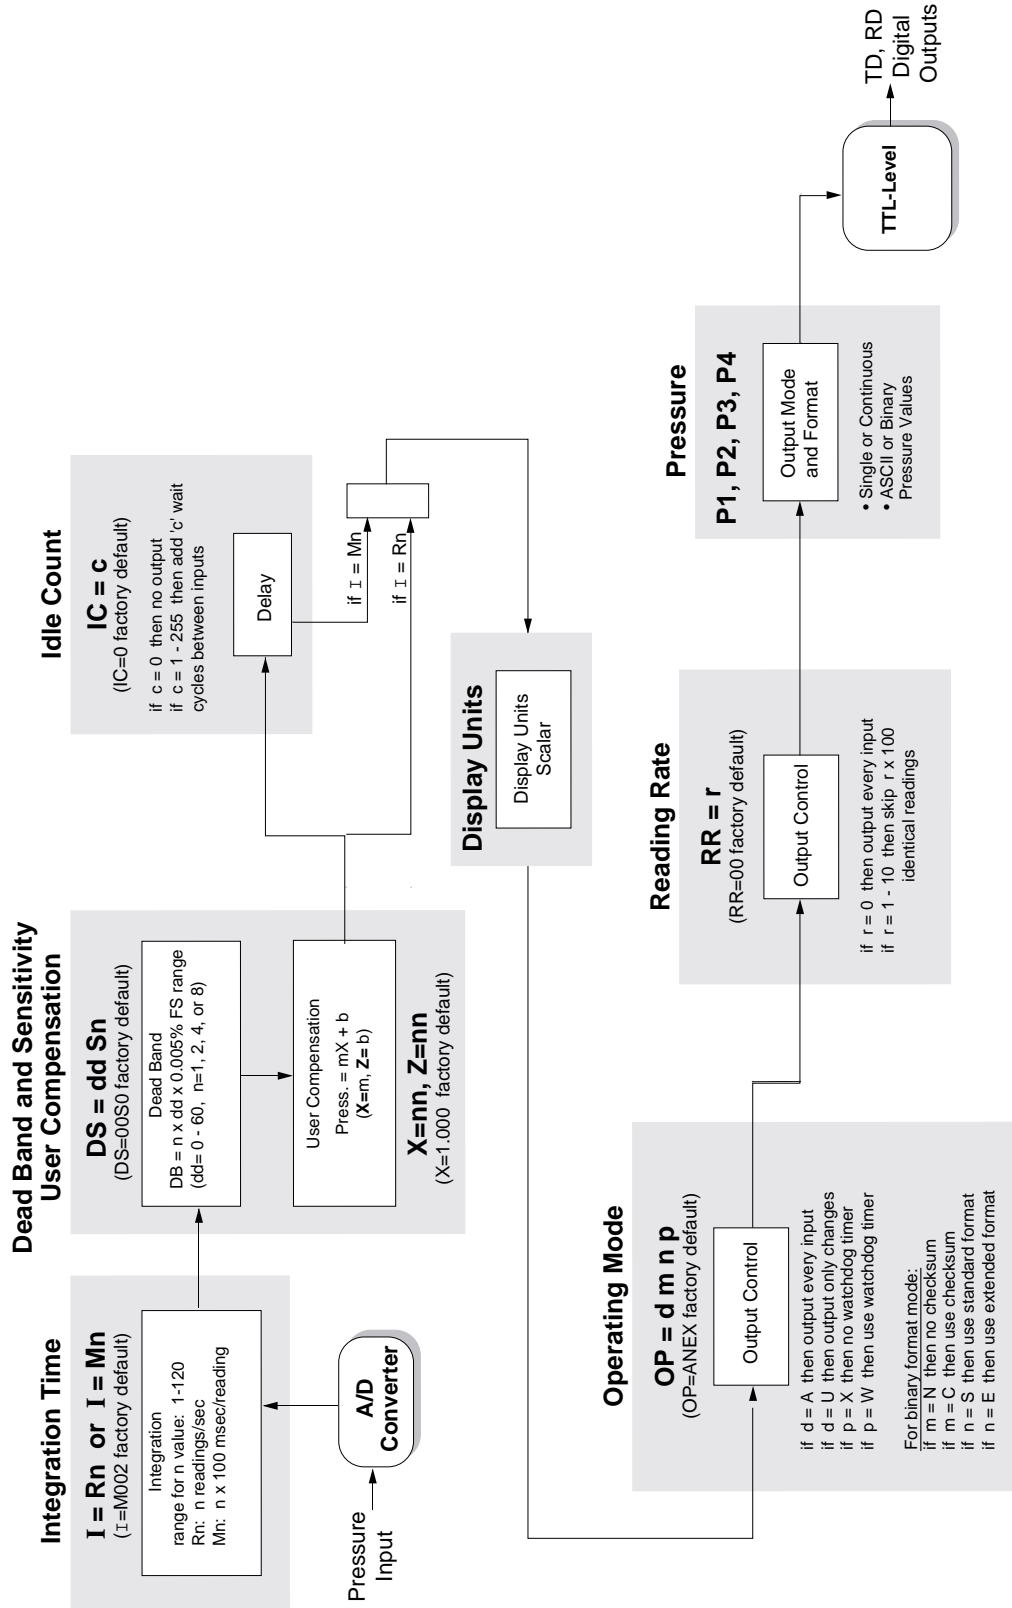


Figure 2. Pressure Reading Control

Shaded blocks represent command codes executed in the microprocessor

4.4 Customized Pressure Range

The user can adjust the pressure vs. output value transfer curve using the X=, Z= and F= commands. The X= command adjusts the slope of the pressure output curve. The range of adjustment for X=, and Z= commands is $\pm 0.6\%FS$ in 0.005% increments. The F= command can change the full scale pressure span to any value between 50% and 100% of the factory specified range (M=).

The purpose of these commands is to allow the user to provide compensation for the pressure values specific to an application. This type of adjustment is made after the HPB temperature compensates the pressure reading according to the factory calibration. The user supplied values (X=, Z=) are used as an $mx+b$ correction. The X= command supplies the slope adjustment, or 'm', value and the Z= command supplies the offset adjustment, or 'b', value. Figures 3 and 4 illustrate these commands.

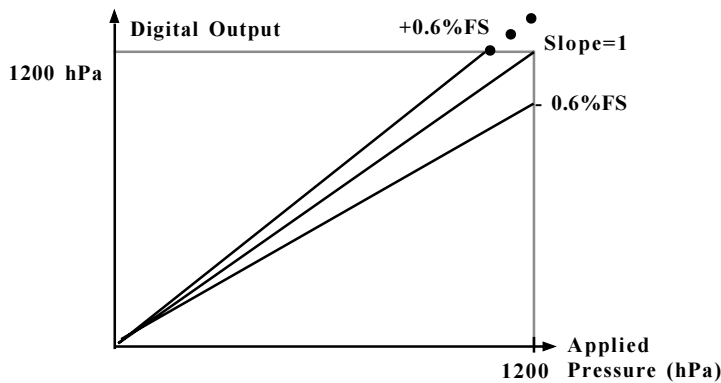


Figure 3. Custom Slope (X=) Options

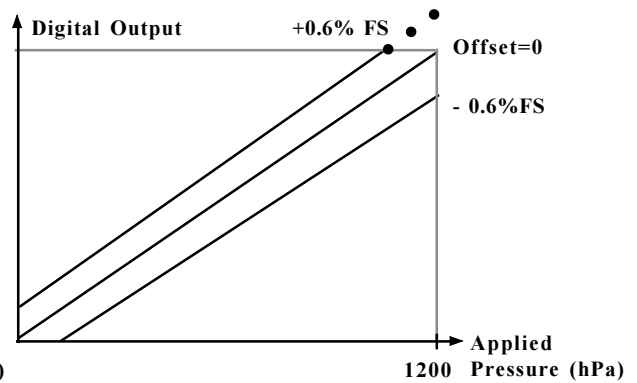


Figure 4. Custom Offset (Z=) Options

The user compensated pressure output can be expressed in terms of X= slope values 'm' where $m=0$ to ± 120 . The offset value, Z=, can be expressed as 'b' where $b=0$ to $+120$.

$$\text{Pressure Output} = [(1 + m \times 0.00005) \times \text{Pressure Reading}] + [(b \times 0.00005) \times (\text{full scale})]$$

The F= command is used in conjunction with the X=, and Z= command to customize the full scale range and user compensation of the HPB. The F= command allows the user to reduce the full scale range of the HPB as much as one-half the factory FS value. The F= command value can have up to 5 significant digits with a decimal point. Enter an F=0 command to disable this function and return to the factory default (M=) full scale value. Using the F= command, the maximum allowable full scale pressure is the M= value and the minimum allowable FS pressure is $(0.5 \times \text{the } M= \text{ value})$. The new F= value becomes the standard FS number used for other commands and range calculations. (Note that the accuracy specification is always referenced to the factory (M=) full scale value.) For example, to customize the full scale range of a 1200 hPa (900mm Mercury - mmhg) device to 800 mmhg, first select the desired display units using the DU command. Enter the command *ddWE followed by a *ddDU=mmhg. Then enter a *ddWE followed by a *ddF=800. The full scale pressure for this unit is now 800 mmhg.

4.5 Command Illustrations

The figures below illustrate the commands that affect the pressure output rate. Figure 5 shows a varying pressure signal having a reading integration time of 200 msec. If the small variations on the pressure signal are considered noise and are undesirable, increase the integration time to time-average the pressure signal, and filter out the noise.

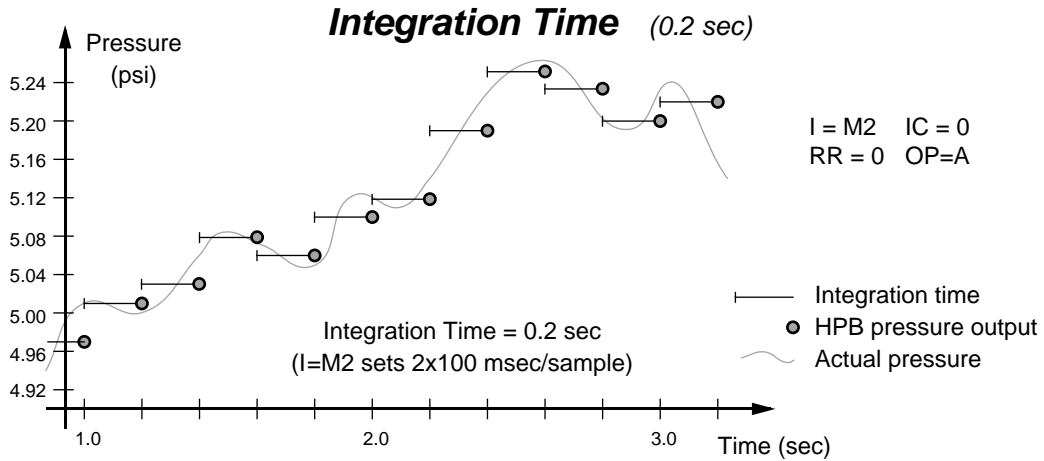


Figure 5. Integration (I=) Command, Example 1

Figure 6 shows the same pressure signal with a 1 second integration time reducing the noise variations on the output readings. Of course, the penalty for doing this is reducing the response time to rapidly changing pressures that are not considered noise.

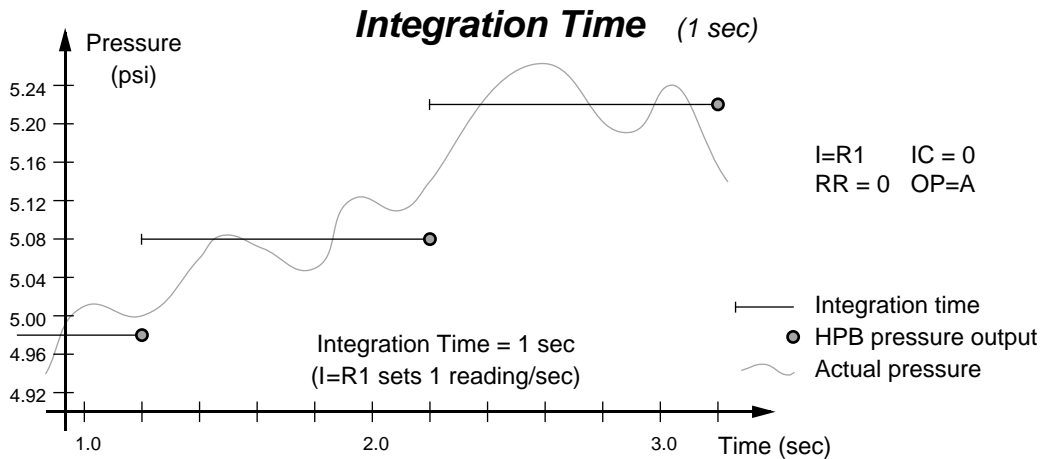


Figure 6. Integration (I=) Command, Example 2

Figure 7 shows the effect of the deadband setting in the **DS** command. If a deadband of $\pm 0.02\%$ FS is selected, then the pressure output will not change reading as long as it is within this limit (± 2.4 hPa for a 1200 hpa unit). If the pressure exceeds or falls below this threshold, the pressure reading will track the actual pressure value. It will continue to track the pressure value until there is no change again within the threshold limit.

Figure 8 illustrates the effect of the Idle Count (**IC**) command for four different pressure curves. The **IC** command does nothing more than skip over a set number of readings. If the idle count were set to **IC=4**, then after a pressure output reading, the HPB would not output the next 4 readings and the fifth one would become the next output reading. This feature allows the reading rate to be established different from the integration time. This feature is useful for minimizing the communications traffic on a network of many HPB units.

Figure 9 illustrates the Synchronize Integration cycle (**SI**) command as well as the Transceiver Operating parameters (**TO**) options that affect it. This is only for units configured to multi-drop operation.

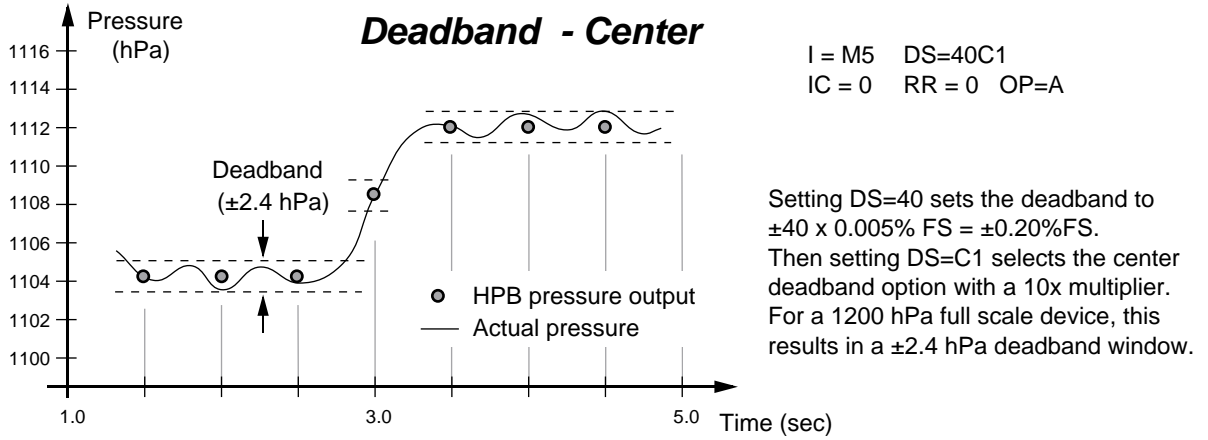


Figure 7a. Deadband and Sensitivity (DS) Command Examples

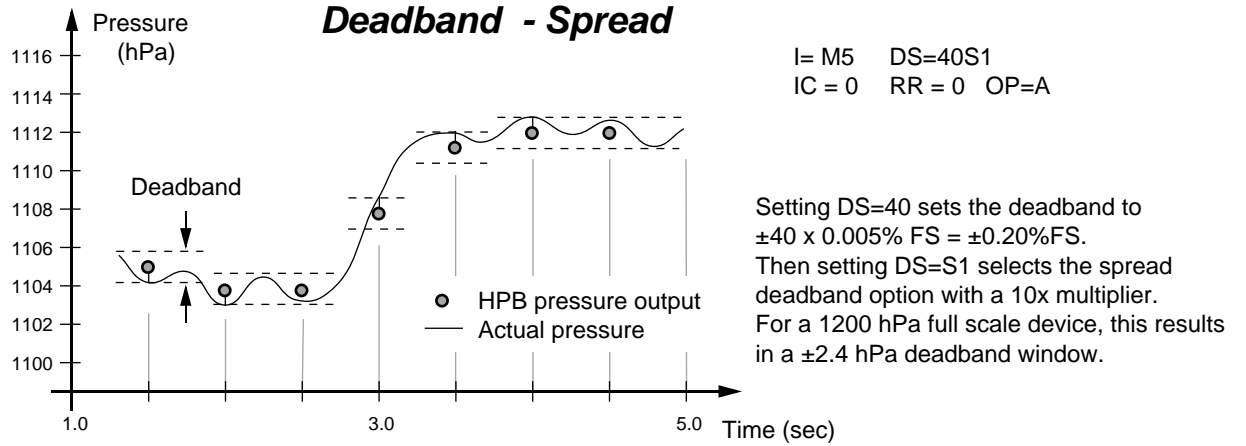


Figure 7b. Deadband and Sensitivity (DS) Command Examples


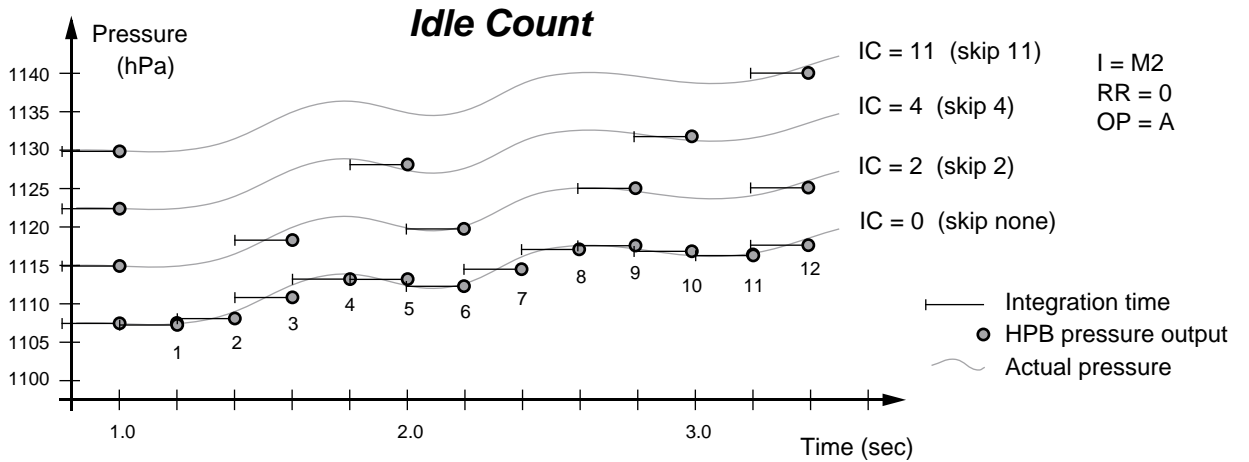


Figure 8. Idle Count (IC) Command Example

Synchronize Integration - SI (Multi-Drop only)

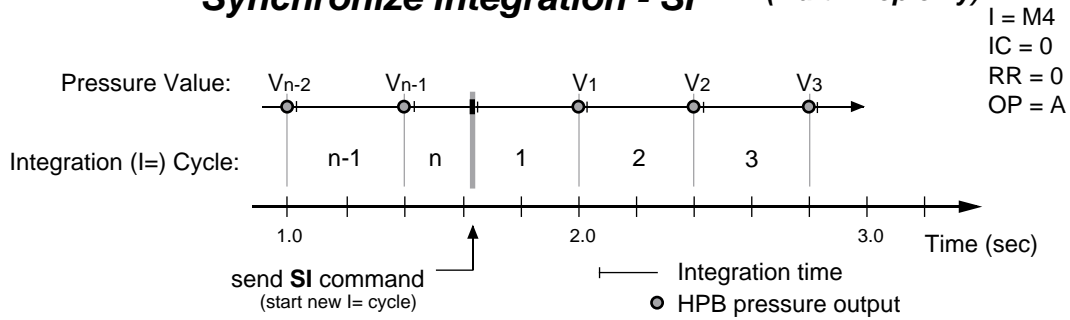

	*ddP1 Pressure Value Output during:				
TO Option	Cycle n-1	Cycle n	Cycle 1	Cycle 2	Cycle 3
TO=C (default)	V _{n-2}	V _{n-1}	V _{n-1}	V ₁	V ₂
TO=A	V _{n-2}	V _{n-1}	V _{n-1}	V ₁	V ₂
TO=S	V _{n-2}	V _{n-1}	<cr>	V ₁	V ₂
TO=H	V _{n-2}	V _{n-1}	<cr>	V ₁ *	

* V₁ can be read once anytime after Cycle 1

Figure 9. Synchronize Integration Cycles (SI) Command Example

4.6 Pressure Reading Decimal Position

Digital pressure readings are displayed with a sign and a decimal position. Table 1 shows the number of decimal place variations among the HPB pressure ranges; the number of digits to the right of the decimal place. This is important when converting a binary format number so that decimal position can be determined. For pressure values less than 1.0, (.XXXX), the first character of the pressure reading will be a zero (=0.XXXX). For pressure values, XX.XX, greater than 1.0, the first character will be a space or a number (= XX.XX or =XX.XX). For example, a 17.6 psia device set to KGCM units (17.6psi x 0.070307= 1.23740 kg/cm²) will read the full scale pressure as “#23CP=1.2374” kg/cm². (The numerical limit for FS reading is 90,000.)

Units	Decimal Place	Units	Decimal Place
ATM	4	KGCM	4
BAR	4	KPA	2
CMWC	2	HPA	1
FTWC	2	MMHG	1
INHG	2	MPA	5
INWC	2	MWC	3
MBAR	1	PSI	3

Table 1. Decimal Place Locations for Pressure Readings
(Extended format selected, OP=E)

4.7 HPB Addressing

The HPB provides three levels of addressing. The lowest level of address is the individual unit address, or **device ID**. This address level is used to address any single HPB. The next level is **group** address, which is separate from the device ID. All HPB units with the same group address will respond to a command sent to this level address. The last is a **global address**, which is read by all HPB's on the network. The device ID can be assigned by direct command or assigned automatically based on its position from the host processor in HPB network. The **null address** (00) is simply a default device ID that the HPB automatically assumes until one is assigned. That is, upon power-up, if there is no ID assigned, and an ID has not been stored in the EEPROM, then the HPB will assign itself the "00" null address.

The individual unit address, or **device ID**, has an assigned range from 01-89. The null address 00 is the factory default address for unassigned HPB's. A unit with the null address, replies with a 'null address' header. The null address header characters are '?' for ASCII format or '^, &, |, or %' for binary format (see Section 5.5 for these format types). A unique device ID allows the host processor to send commands to specific units on a bus.

The second level of addressing is a multicast, or **group**, address in the range of 90-98. Each unit can be assigned a group address by the ID command. A unit responds to its group address in the same manner as it does to its global address described below. The group addressing allows the host processor to send commands to several units having the same group address. The factory default group address is 90.

The highest level of addressing is the broadcast, or **global**, address 99. All units receive global addressed commands. All ring networked units respond to global commands. Only multi-drop units with assigned addresses will respond to global commands. A multi-drop unit with a null address will not reply to any global command. The global address is not assigned but is built into the HPB.

Ring Network

The ring network consists of a three-wire bus (TD, RD, and GD) that begins and ends at the host processor. The maximum number of HPBs with assigned device IDs on a network is 89.

An HPB ring network connection of six units is shown in Figure 10. In this example, the Device IDs are sequential, starting from 01, from the transmit port of the host processor around the loop. There are two address groups, 91 and 93; each have 3 HPB units assigned. (Note: A TTL-to-RS232 converter is required for connection to the host processor.)

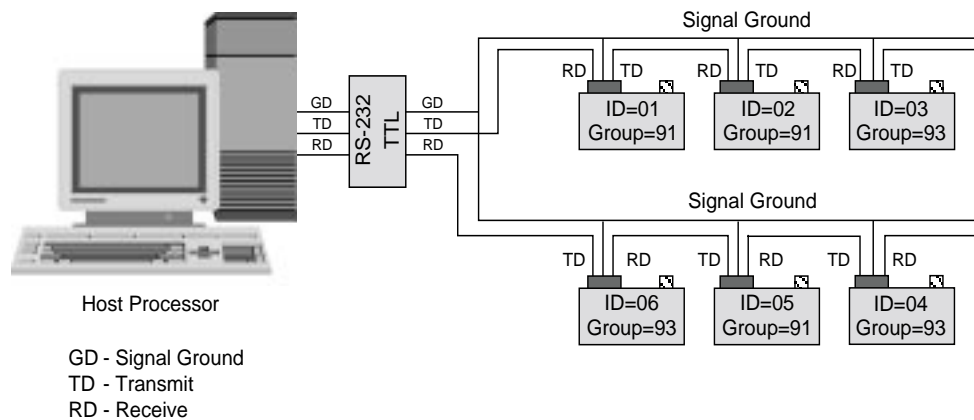


Figure 10. HPB Ring Network

Each HPB on a communication ring must have a unique address in order to *individually* receive commands from the host processor. For example, if more than one HPB on a ring has a null address, and a 00 address command is transmitted by the host, only the first null address HPB will receive the command and the command is not passed on. This is the same for any address on a ring network.

Another advantage of the ring network is the ability to automatically assign device IDs to every HPB on the network. Since commands flow through every HPB on the ring, a single ***99ID=01** command will assign ID=01 to the first unit, and each HPB in the ring will assign itself the next number. As the command is passed along, each unit adds one to the ID command. For the example shown in Figure 12, the command will read ***99ID=07** when it returns to the host processor. The form of self-addressing will indicate the HPB position in the communication ring relative to the host processor.

Every unit in the ring network has an assigned group address. When the host processor sends a group addressed (***90 to *98**) command, that command cycles through every HPB and is passed to the next one in the loop. Those units having that group address read the command, then pass the command and reply to the next unit in the ring. This is called a **sequential response**. Some sequential responses pass the string of HPB replies before the group command while others pass the string of HPB replies after the group command. See Table 4 for specific sequential command types.

Every unit in the ring network responds to a global addressed (***99**) command. All units read the command and pass the command and their response to the next unit in the ring. The sequential response is the same as for the group command described above. See Table 4 for sequential command types.

Multidrop Network

The Multi-drop network consists of a three-wire bus (TD, RD, GD), as shown in Figure 11. A star network configuration can also be used where each unit is connected directly to the TD, RD, GD terminals at the host processor. The maximum number of addressable HPBs on a network is 89.

A HPB multidrop network connection of six units is shown in Figure 11. In this network, the device IDs are not in order from one end of the network to the other. Ignoring their physical position on the network, the device IDs are sequential beginning with ID=01 and without duplication. This is an important setup condition if response to global commands (***99**) is desired.

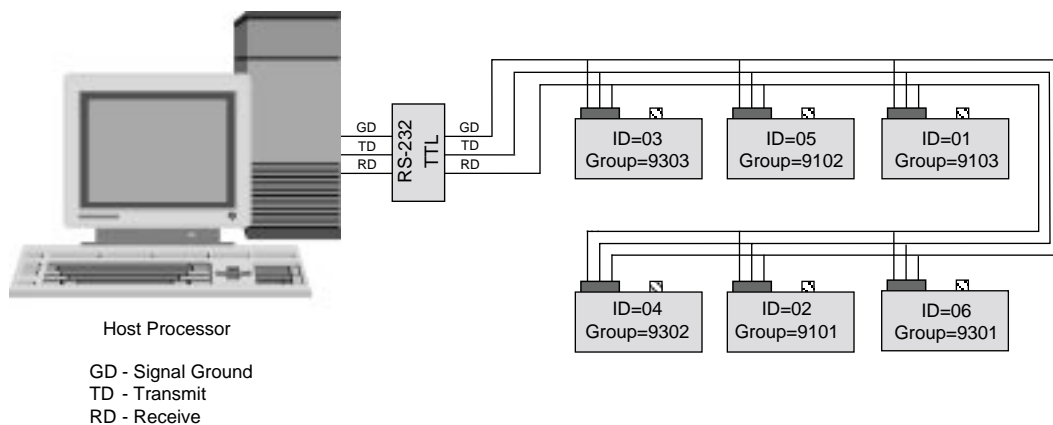


Figure 11. HPB Multidrop Network

HPB units on a multidrop bus have a preassigned order to follow when they are responding to a global (*99) command. Each HPB on the communication bus must have a unique address in order to individually receive commands from the host processor.

To assign device IDs when the HPBs are on a multidrop network takes a bit more record keeping than for a ring network. When a multi-drop unit has a null address (unassigned), it will only respond to null addressed (*00) commands with a "?00" reply header. All null addressed units will listen to a group or global addressed command and take action, if required. If there are two or more HPBs on the bus with null addresses, then they will both respond together and may cause a garbled message. Null addressed units will still receive global (*99) commands but will not answer. It is important to assign each unit a unique and sequential device ID to begin any useful communication.

Assign Device IDs: Start with a list of all the units serial numbers. For example, send the global commands *99WE and *99S=00001234. This will prepare the HPB with serial #00001234 to assign itself the number from the next global ID command. Send *99WE, *99ID=02, *02WE, and *02SP=ALL to complete the device ID assignment. Repeat this for each unit on the multi-drop network. Other methods for device ID assignments are described in the ID command description.

Assign Group Numbers: Once the device IDs are set the group IDs can be assigned. Each unit in the same group must have a sequential sub-address - beginning with 01. The sub-address tells each unit what order it should respond in a group addressed command. To set the group (91) and sub-address (01) for device ID=02, send the following commands: *02WE, *02ID=9101, *02WE, *02SP=ALL. Now when a command is sent to group 91, device ID=02 will be the first one to reply. In Figure 11, there are two address groups, 91 and 93; each have 3 HPB units assigned.

Every HPB in the network receives all commands. If the command has a group or global address requiring a response, the HPBs addressed will wait until the correct number of carriage returns <cr> have been received before sending its response. If the command had a global address (*99), then the HPBs will respond in the order of the assigned device IDs. If the command had a group address (*90 to *98), then only HPBs with the correct group address will respond in order of the assigned group sub-addresses.

For example, send the command (*99P1<cr>) to a multi-drop network with three units having sequential device IDs (01-03). Unit 01 will respond immediately after receiving the first carriage return <cr> associated with the *99P1 command. Unit 02 will require a second <cr> from the host before it will respond and unit 03 will require a third <cr>. Any additional carriage returns will be ignored.

If a group command (*94P1<cr>) is sent to a multi-drop network with six units assigned group and group sub-addresses of 9401, 9402, 9403, 9501, 9502 and 9503, only three units will respond in the following manner. Unit 9401 will respond immediately after receiving the first carriage return <cr> associated with the *94P1 command. Unit 9402 will require a second <cr> from the host before it will respond and unit 9403 will require a third <cr>. Any additional carriage returns will be ignored.

It is important that during the above response sequences, the host processor or user not transmit on the bus until the last unit has finished its message. A carriage return <cr> sent during the response sequence will cause the next unit ID to send its response even though the previous unit ID is still transmitting.

Another option in the multidrop network is the use of alternate headers. That is, the leading symbol (*, #, etc.) in command and response communications on the bus. The M=ALT command is used to select the alternate message headers of non-printing characters. This option is useful when there is a conflict between the standard HPB message headers and the message characters used by some other components that share the multi-drop TTL bus.

5.0 COMMANDS

5.1 Command Format

Communication between the host or control processor and a HPB is accomplished by message transfers, or commands and replies. Communications initiated by the host processor to one or more HPB's are called **commands** and must begin with an '*' or a '~' **header character**. All commands must be terminated by a <cr> (carriage return or ENTER key). Communications initiated by a HPB to the host are called responses or **replies**, and begin with one of ten unique header characters (2 for ASCII, 8 for binary) and are also terminated with a <cr>.

Commands may either *request information* from one or more HPBs such as read pressure, or *direct action* to one or more HPBs such as change a configuration value or operating mode.

Typical HPB command format: ***ddcc** = **nnn** <cr>

Where: * is the command header character
dd is the decimal address of the command message (00-99)
cc is the command code. The command code characters can be one letter, two letters, or a letter and a number. The letters are not case sensitive; i.e., either an upper case or lower case may be used. The HPB will convert the character to upper case.
= equal sign (required in some commands)
nnn additional characters (required in some commands)
<cr> carriage return (do not type, press the ENTER key)

Note: For multi-drop mode, alternate headers are available. (see **MO** command)

For Ring mode, when manually applying commands to one or more HPBs which are in the continuous send mode (**P2**, **P4**, **T2**, **T4**), the special header character '\$' should be used to suspend all HPB transmissions while the command message is being typed. The '\$' is immediately followed by the normal command format.

Also for ring mode, if an erroneous command is sent to the HPB, it is echoed back to the host in the same form it was sent. The only exception to this is when a group or global address command (ID = 90 to 99) is sent such as *99S2=15<cr>. These addresses will always echo the command back to the host processor after being read by all HPBs.

Commands are not executed until the carriage return is applied; therefore, any command message may be re-entered at any time prior to the carriage return. To do this, type a '*' followed by the command, or press a carriage return and retype the command.

Only the minimum number of characters is required for command inputs to distinguish between various command options. For example, **DU=HP**, **DU=HPA**, or **DU=HPXYZ** will all set the display units to hectopascals, since only the first two characters (**HP**) are needed. Also, when a parameter value is entered that exceeds the stated range for that value, the parameter will be set to the maximum value for that range.

5.2 Information Request Commands

Information request commands retrieve information from the HPB as an inquiry. One example would be an idle count command inquiry. The command ***00IC** would request the idle count value. The response may be **?01IC=213**, assuming the unit had not been assigned a device ID. A characteristic of the information request command is that the '=**nnn**' portion of the command format is dropped.

Most commands that set parameters may be used in this form to inquire about that parameter's value. For commands that have a single letter command code (**cc**), use that letter followed by an '=' equal sign to form an inquiry. For example, to inquire about the serial number, use ***00S=** as an information request.

5.3 Action Directing Commands

Action directing commands can 1) change the HPB configuration, 2) set specific parameter values, 3) activate or deactivate controls, or 4) store information in EEPROM.

Examples of action directing commands are:

- 1) *00MO=P2M2 Continuous pressure readings and user message at power-up
- 2) *00IC=9 Set the idle count value to 9
- 3) *00B=09-26-00 Set B string in EEPROM to “09-26-00”

A characteristic of most action directing commands is that they are preceded by a RAM, or EEPROM, write enable (**WE**) command. This signals the HPB to write the action directing parameter(s) and is provided as a safeguard to prevent inadvertent changes. The only exceptions to this are the initialization (**IN**) and **OP=O** commands which are activated upon receipt.

5.4 Command Replies – General

Replies are transmitted from the HPB in response to an information request inquiry or due to a power applied condition. All replies end with a <cr> carriage return character, which can be used as a delimiter, to distinguish between sequential responses. Replies have two forms: the **ASCII format** – which consists of standard keyboard alphanumeric characters (see Section 5.5), and the **binary format** – which require fewer data bytes that are encoded for computer translation (see Section 5.6).

The binary format replies are for pressure readings using the **P3** and **P4** commands. The replies are more compact, require less data transmission, and more than double the data transfer capacity. However, the binary format is difficult for people to translate and is best left for a computer to interpret.

The ASCII format characters have readable output values and do not require user interpretation. However, the binary format will transmit a pressure reading in 6 bytes where it may take up to 16 bytes in the ASCII format. (See the Binary Format Replies description below for a detailed explanation of the address and pressure encoding.) There is a mode (**OP=R**) that can transmit ASCII format in 8 bytes.

When an information request command is sent to a HPB or group of HPB's the reply will take on different forms based on the state of the HPB, the address of the HPB, or the out-of-range condition for that parameter.

A pressure-over-range error condition will occur when the applied pressure is greater than or equal to 1% of full scale (FS) above the FS limit. For example, if the pressure applied to a 17.6 psi unit is 17.776 psi, then an over range error condition is set (see **RS** command). Similarly, an under range condition occurs when the applied pressure is greater than or equal to 1%FS below the minimum limit. To indicate an out-of-range condition (greater than ±1% FS), the equal '=' sign will be replaced by an exclamation point '!' in the pressure reading reply. This indicator will disappear when the applied pressure is in range, but the **RS** command error flag will continue to be set until it is cleared by an inquiry.

The maximum reading will flatten out between 1% and 5% beyond the FS limit with increasing pressure. This limit varies from device to device but will continue to display the out-of-range indicator (“!” in place of “=”) until the pressure drops below 1% over FS limit.

5.5 ASCII Format Replies

Most commands use the ASCII format reply and may be identified by the header character (ASCII – American Standard for Coded Information Interchange). The ASCII format consists of standard keyboard alpha-numeric characters and symbols. The **header character** is the first character in the reply from the HPB. The ASCII format information request reply uses the following header characters:

- # ASCII format reply from an assigned address HPB.
- ? ASCII format reply from a null address HPB.

Example replies to command code (cc) are: (where xx = the parameter value)

- #ddcc=xx reply from unit with an assigned address (dd).
- #ddcc!xx reply from unit with an assigned address (dd) when 1) pressure or temperature reading is out-of-range (over/under limit = $\pm 1\%$ FS) or, 2) an EEPROM parity error has occurred (pressure reading will output zero).
- #ddcc=.. reply from unit with an assigned address (dd) when data is not available yet from the HPB. Request again.
- ?ddcc=xx reply from a null address unit (dd).
- ?ddcc!xx reply from a null address unit (dd) when 1) pressure or temperature reading is out-of-range (over/under limit = $\pm 1\%$ FS) or, 2) an EEPROM parity error has occurred (pressure reading will output zero).
- ?ddcc=.. reply from a null address unit (dd) when data is not available yet from the HPB. Request again.

Note: For multidrop bus mode alternate header descriptions see MO command description.

ASCII format command and reply messages contain only the set of printable ASCII characters as described in the following list of legal characters:

- | | | | |
|-----|---|-----|--|
| * | Asterisk | # | Pound sign |
| ~ | Tilde | ? | Question mark |
| - | Minus | { | Left brace |
| + | Plus | ! | Exclamation mark |
| . | Period | ^ | Circumflex |
| = | Equal | | Bar |
| > | Greater than | } | Right brace |
| < | Less than | @ | At/each |
| 0-9 | Numbers zero through nine | & | And/ampersand |
| a-z | Letters 'a' through 'z' (not sent in replies) | % | Percent |
| A-Z | Letters 'A' through 'Z' | \$ | Dollar sign (used before a command to stop, or suspend, continuous HPB transmissions while manually typing commands) |
| | | ‘ ‘ | Space, or Blank |

5.6 Binary Format Replies

The binary format reply is only used for the pressure reading commands **P3** and **P4**. It consists of a 1 byte header character, 4 bytes data, an optional 1 byte cyclic check sum, and 1 byte <cr> character. For the binary format replies, the address type, error condition and data sign are encoded into the single header character as shown in Table 2.

Header Characters	Assigned Address	Error Condition	Data Sign Hdr.	Alternate Multi-drop only (1)
{	Yes	No	+	DC1 (ctrl Q)
}	Yes	No	-	DC2 (ctrl R)
!	Yes	Yes	+	DC3 (ctrl S)
@	Yes	Yes	-	DC4 (ctrl T)
^	Null	No	+	none
&	Null	No	-	none
	Null	Yes	+	none
%	Null	Yes	-	none

(1) See M= command and Table 9 for ASCII hex value

Table 2. Header Description for Binary Format Pressure Readings

Example **P3**, **P4** command replies in binary format: (where hhhh = the 4 byte data value)

{hhhh<cr> reply from unit with an assigned address, no errors, (+) data sign.
 @hhhh<cr> reply from unit with an assigned address, error condition exists, (-) data.
 ^hhhh<cr> reply from a null address unit, no errors, (+) data sign.
 &hhhh<cr> reply from a null address unit, no errors, (-) data sign.
 {nnnn<cr> where nnnn pressure value is (FFFF)Hex, all ones.

The binary format reply: xx??? or xx_?? indicates that data is not yet available from the HPB. The 'xx' is the header character and the 6 most significant bits of the address.

The 4 byte data value hhhh contains the device address and the pressure reading. The most significant bit of each 'h' character is a parity bit. The next most significant bit of each 'h' character is either a 1 or 0 required to make the resultant byte a printable character. The 6 least significant bits are used for the device address and pressure reading.

The device ID and the pressure reading can be read by combining the 6 least significant bits of each of the four 'h' characters, which result in 24 bits of information. The first 7 bits represent the device address in binary form (00 through 89 decimal). The next 17 bits represent the pressure reading and can be configured in the signed form or the extended form by using the OP command. The 24 bit binary forms are:

Extended: 7 bit binary device address 17 bit binary pressure data
Signed: 7 bit binary device address sign bit + 16 bit binary pressure data

Example binary reply: {@#16<cr>

Refer to Table 2 for the header character ‘{’ definition. The sign of this pressure value is determined by the header character. The next 4 characters, ‘@#16’, contain the encoded device address and the temperature compensated pressure reading. For this example, the extended form is used so that the pressure data is represented as a 17 bit binary value. Using the binary format character codes found in Table 3, convert each of the 4 byte characters into the binary value equivalent. The highlighted portion of each character below represents the 6 least significant bits. (Parity is off, OP=N)

@=01 000000 #=00 100011 I=00 110001 6=00 110110

Using the least significant (LS) 6 bits of each of the 4 data bytes, regroup the binary numbers into the 7 bit binary device address and 17 bit binary pressure data, which produces the 24 bit string:

000000 100011 110001 110110 = @#16 least significant 6 bits of each byte

0000001 00011110001110110 = (device ID=01) and (pressure = 15,478)

The binary format reply indicates the device address is ID=01 and the pressure reading is 15,478. Now, the decimal point position for the pressure reading must be determined. The decimal place is in the same position as when it reads a P1 pressure command (see Table 1). So, if this is a 17.6 psia device reading in inches water column (DU=INWC) then there are 2 decimal places. The final reading from the binary format will be **154.78 inH₂O**. The header character for this binary reply was ‘{’ which indicates a positive pressure value.

Binary Format Character	Decimal Value	Hex Value	Binary Value	Least 6 Significant Bits
@	64	40	0100 0000	000000
A	65	41	0100 0001	000001
B	66	42	0100 0010	000010
C	67	43	0100 0011	000011
D	68	44	0100 0100	000100
E	69	45	0100 0101	000101
F	70	46	0100 0110	000110
G	71	47	0100 0111	000111
H	72	48	0100 1000	001000
I	73	49	0100 1001	001001
J	74	4A	0100 1010	001010
K	75	4B	0100 1011	001011
L	76	4C	0100 1100	001100
M	77	4D	0100 1101	001101
N	78	4E	0100 1110	001110
O	79	4F	0100 1111	001111
P	80	50	0101 0000	010000
Q	81	51	0101 0001	010001
R	82	52	0101 0010	010010
S	83	53	0101 0011	010011
T	84	54	0101 0100	010100
U	85	55	0101 0101	010101
V	86	56	0101 0110	010110
W	87	57	0101 0111	010111
X	88	58	0101 1000	011000
Y	89	59	0101 1001	011001
Z	90	5A	0101 1010	011010
[91	5B	0101 1011	011011
\	92	5C	0101 1100	011100
]	93	5D	0101 1101	011101
^	94	5E	0101 1110	011110
_	95	5F	0101 1111	011111

Binary Format Character	Decimal Value	Hex Value	Binary Value	Least 6 Significant Bits
' (1)	96	60	0110 0000	100000
!	33	21	0010 0001	100001
"	34	22	0010 0010	100010
#	35	23	0010 0011	100011
\$	36	24	0010 0100	100100
%	37	25	0010 0101	100101
&	38	26	0010 0110	100110
'	39	27	0010 0111	100111
(40	28	0010 1000	101000
)	41	29	0010 1001	101001
j (2)	106	6A	0110 1010	101010
+	43	2B	0010 1011	101011
,	44	2C	0010 1100	101100
-	45	2D	0010 1101	101101
.	46	2E	0010 1110	101110
/	47	2F	0010 1111	101111
0	48	30	0011 0000	110000
1	49	31	0011 0001	110001
2	50	32	0011 0010	110010
3	51	33	0011 0011	110011
4	52	34	0011 0100	110100
5	53	35	0011 0101	110101
6	54	36	0011 0110	110110
7	55	37	0011 0111	110111
8	56	38	0011 1000	111000
9	57	39	0011 1001	111001
:	58	3A	0011 1010	111010
:	59	3B	0011 1011	111011
<	60	3C	0011 1100	111100
=	61	3D	0011 1101	111101
>	62	3E	0011 1110	111110
?	63	3F	0011 1111	111111


(1) The grave accent character is used instead of a space to provide printable characters for debug and verification purposes.
(2) The lower case 'j' is used instead of the '*' because the '*' is interpreted as a message header character.

Table 3. Binary Format Character Codes

5.7 Command And Reply Sequencing

The HPB can be operated in either a multi-drop or ring configuration. See Section 6 for various electrical connections. In these modes, the host processor sends a command and the HPB responds with a reply. The reply and timing of the reply are dependent on the command and HPB network configuration.

Typical command and reply messages are shown in Figure 12 for a single HPB connected to a host processor. The **CMD** waveform represents the command sent from the host to the HPB. It is actually a sequence of TTL level ASCII characters sent at the correct baud rate and parity type (see **BP** command). The **REPLY** is the corresponding response from the HPB to the **CMD** command. Note that the command input is case insensitive, that is, either upper case or lower case letters may be used.




COMMAND	REPLY	COMMENT
Power-on	?01HPA__17.6_PSIa	Factory set power-on message (16 character)
*01S=	?01S=00036714	Read factory set serial number
*99we	*99WE	RAM or EEPROM write enable (global)
*99id=01	*99ID=02	Set device IDs (global)
*01P1	#01CP=12.345	Read pressure from device ID=01
*01ID	#01ID=90	Read group number

Figure 12. Single HPB Command and Reply

When several HPB units are serially connected as a network, the reply sequence now depends on the type of address (individual, group, or global) and command type (sequential response or not). Refer to Table 4 Command Summary Table, for the sequential response type of each command.

Different types of command and reply messages are shown in Figure 13 for a three-HPB network connected to a host processor. The commands are sent to individual units, groups and global addresses. Note that for group and global addressed commands, the command is sent around the network and returns to the host processor. If the host processor sends a sequential response command to a group or global address, then the reply(ies) may return before or after the command, depending on the command type. Examples of the different types of sequential response commands are also shown. The reply format is ASCII.

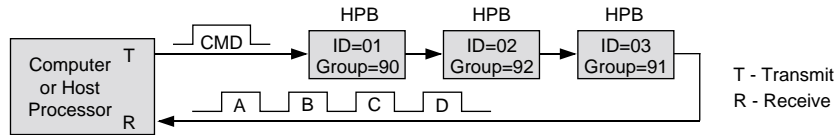

Command (1)	Reply A	Reply B	Reply C	Reply D
*01T1	#01CT=25.4	–	–	–
*02WE	–	–	–	–
*02DU=mmhg	–	–	–	–
*02DU	#02DU=MMHG	–	–	–
*92DU	#02DU=MMHG	*92DU	–	–
*91P1	#03CP=15.25	*91P1	–	–
*91CK	*91CK	#03CP=15.25	–	–
*99we	*99WE	–	–	–
*99bp=n19200	*99BP=N19200	–	–	–
*99RS= =	#01RS=0000	#02RS=010+	#03RS=000-	*99RS= =
*99WE	*99WE	–	–	–
*99sp=all	*99SP=ALL	–	–	–
*99P1	#01CP=1.274	#02CP=12.498	#03CP=-.00004	*99P1

(1) See Table 4 for types of sequential response commands.
 – Indicates there is no reply for this timing location

Figure 13. Multiple HPB Network Command and Replies

5.8 Command Errors

For a ring configuration, if the host processor receives a HPB reply with a ‘*’ header character, this indicates one of three conditions.

- If the reply is exactly the same as the command sent, and the command was not sent to a group or global address (90 to 99), then the command has been rejected due to an incorrect header, address number, command code or action character.

This error is common if an incorrect command code format was used or if the command should have been preceded by a write enable (WE) command and was not.

If the command was rejected because of an incorrect command code or action character, an error indicator is set which can be read and cleared with the Read Status (RS) command.
- If the command was a group or global command, then the reply should contain the *90.. to *99.. command sent. (The command should contain a 9 as the first digit of the group or global address.) This reply indicates to the host processor the command has been delivered to all addressed units in the network. This indicates an error only if the reply does not contain the command sent.
- The command stream has been aborted by the sending host processor.

Note: A Read Status command is used to determine the error condition and clear the error status. (See Read Status command description for error conditions.)

5.9 Command Summary Table

The HPB command set is summarized in Table 4 Command List. A more detailed description of each command can be found in Section 5.10 Command Descriptions

Table heading explanations for Table 4 Command List:

Command Code: Two-character code (cc) in the command format. The command code characters can be one letter followed by an '=' equal sign, two letters, a letter or a number. The letters are not case sensitive; i.e. either upper case or lower case may be used. The HPB will convert the characters to upper case.

Action Directing Command: Does this command change the HPB configuration? **Yes**—The command changes the HPB configuration as an action directing command. **No**—The command is only an information request command.

Sequential Response with Group or Global Address: Commands that begin with a group or global address (ID=90-99), are passed through the HPB network from one device to the next and eventually end up back at the host processor. The HPB response is sent with the command through the network. **Before**—The HPB response is sent before the group or global command. This is a sequential response. **After**—The HPB response is sent after the group or global command. **NO**—The HPB just passes the command through the network with no response.

Input or Output: Is information input to the HPB or output from the HPB? **In**—Command is only used to input (action direct command) to the HPB. **Out**—Command is only used to output (request information inquiry) from the HPB. **Both**—Command can be used for either IN or OUT purposes.

Requires Write Enable: Is a WE command required before for this command? **Yes**—When sent as an action directed command, it must be preceded by a WE command. **No**—Never requires a WE command beforehand. These are request information commands only.

Terminates Continuous Commands: Will this command stop the HPB flow? **Yes**—This command will end the continuous flow of the P2, P4, T2, T4 commands. **No**—Command will not stop the continuous flow commands.

Write to EEPROM: Can this command have parameters stored in EEPROM? **Yes**—Parameter values associated with this command may be stored in EEPROM. **No**—Can not store anything from this command in EEPROM. **All**—Cause all parameters to be store in EEPROM.

Command Code	Action Directing Command	Sequential		Requires Write Enable	Terminates Continuous Commands	Can Write to EEPROM	Command Description
		Response (98-99) Addresses	Input or Output Type				
A=	No	After (4)	Both	Yes	No	Yes (8)	Data string A – up to 8 characters
B=	No	After (4)	Both	Yes	No	Yes (8)	Data string B – up to 8 characters
BP	Yes	No	In	Yes	Yes	No (9)	Set baud rate and parity
C=	No (1)	After (4)	Both	Yes	No	Yes (8)	Data string C – up to 8 characters
CK	No	After (4)	Out	No	No	No	Check for EEPROM checksum error
D=	No (1)	After (4)	Both	Yes	No	Yes (8)	Data string D – up to 8 characters
DO	Yes	Before	Both	Yes (6)	No	No (9)	Set default operating parameters
DS	Yes	Before	Both	Yes (6)	No	No (9)	Set deadband and sensitivity values
DU	Yes	Before	Both	Yes (6)	No	No (9)	Set pressure output display units
F=	Yes	After (4)	Both	Yes (6)	No	No (9)	Set custom full scale pressure range
I=	Yes	After (4)	Both	Yes (6)	No	No (9)	Set integration time, Rn and Mn forms
IC	Yes	Before	Both	Yes (6)	No	No (9)	Set idle count (data output rate)
ID	Yes	Before	Both	Yes (6)	No	No (9)	Set HPB device ID or group number
IN	No (2)	No	In	No	Yes	No	Initialize or reset HPB processor
M=	Yes	After (4)	Out	No	No	No	Reads maximum full scale setting
MO	Yes	Before	Both	Yes (6)	No	No (9)	Set power-up mode parameters
OP	Yes	Before	Both	Yes (6)	No	No (9)	Set operating mode parameters
P=	No	After (4)	Out	No	No	No	Read HPB production date
P1	No	Before (5)	Out	No	No	No	Single pressure reading (ASCII)
P2	No (3)	After	Out	No	Yes (7)	No	Continuous pressure reading (ASCII)
P3	No	Before (5)	Out	No	No	No	Single pressure reading (binary)
P4	No (3)	After	Out	No	Yes (7)	No	Continuous pressure reading (binary)
RR	Yes	Before	Both	Yes (6)	No	No (9)	Set reading rate for identical data
RS	No	Before (5)	Out	No	No	No	Read status of error conditions
S=	No	After (4)	Out	No	No	No	Read HPB factory serial number
SI	Yes	No	In	No	No	No	Synchronize pressure integration
SP	Yes	No	In	Yes	No	All	Store RAM parameters in EEPROM
T1	No	Before (5)	Out	No	No	No	Single temperature reading (°C)
T2	No (3)	After	Out	No	Yes (7)	No	Continuous temperature reading (°C)
T3	No	Before (5)	Out	No	No	No	Single temperature reading (°F)
T4	No (3)	After	Out	No	Yes (7)	No	Continuous temperature reading (°F)
TO	Yes	Before	Both	Yes (6)	No	No (9)	Set transceiver operating mode
U=	Yes	After (4)	Both	Yes (6)	No	No (9)	Set user supplied pressure units
V=	No	After (4)	Out	No	No	No	Read HPB software code version
WE	Yes	No	In	No	No	No	Write enable for RAM/EEPROM
X=	Yes	After (4)	Both	Yes (6)	No	No (9)	Set ‘m’ of user mx+b control
Z=	Yes	After (4)	Both	Yes (6)	No	No (9)	Set ‘b’ of user mx+b control

Table 4. Command List

See Previous page for descriptions of table headings.

Table 5. Command List Notes

- (1) The **C=** and **D=** commands do not change the mode of operation but do provide a user supplied power-up message if configured using the **MO** command.
- (2) The **IN** command does not change the operating parameters stored in RAM, but it does stop continuous readings (**P2**, **P4**, **T2**, **T4** commands). If the **IN=RESET** command is sent, then any parameters that were stored in RAM, and were not stored in the EEPROM with a **SP** command, will default to the last stored EEPROM value. This may cause a change in the operational parameters as well as a configuration change.
- (3) The **P2**, **P4**, **T2**, and **T4** commands do not change the operating parameters, only activate continuous readings.
- (4) When an information request command is sent to a group or global address, the HPBs do not respond sequentially. That is, the command is returned to the host processor before the replies from the HPBs. Also, these commands require more time for execution, often requiring EEPROM reads and/or writes, so responses from more than one HPB are not received in any guaranteed order. During the execution of one of these commands, if another command is received that is an “After” type, whether globally, group, or individually addressed, the received command is rejected and the command read status error (see **RS** command) is set.
- (5) These commands may cause sequential responses from any, all or none of the addressed units. A sequential response is when the HPB reply is sent before the global or group command through the network. See the individual command descriptions for detailed information.
- (6) These commands only require a write enable (**WE**) when used in the action directing form. For these commands the **WE** command provides a single occurrence write enable for RAM update. That is, only the next instruction is written to RAM. The **WE=RAM** command provides continuous write enables for RAM for multiple command updates. The continuous RAM enable is active until a subsequent **WE** is sent.
- (7) These commands terminate an active continuous reading command (**P2**, **P4**, **T2**, **T4**) and initiate the new one.
- (8) These commands automatically write to the EEPROM when they are used in the action directing form, which must be preceded by a **WE** command.
- (9) These commands can be used to change RAM contents which can then be written to the EEPROM using the **SP=ALL** command.

5.10 Command Descriptions

In the command descriptions, the definitions and conventions below apply. For an example of each command and associated reply, see Section 3 Commands – Quick Reference. The factory default values are shown in Table 5.

- Inquiry:** **Information requesting command.**
- Action: Action directing command(s).
- EEPROM Store: Command(s) to permanently store value or condition into EEPROM.
- Bold** Words that appear in boldface should be typed as shown.
- Italics* Words that appear in italics are place holders for information you supply.
- {Either|Or} Words that appear in braces with a vertical line between indicate a mandatory choice between two or more items.

Typical HPB command format: *ddcc = nnn <cr>

- Where: * is the command header character (a '~' in one case).
- dd is the decimal address of the command message (00-99).
- cc is the command code. The command code characters may be one letter, two letters, or a letter and a number. The letters are not case sensitive; i.e. either upper case or lower case may be used. The HPB will convert the character to upper case.
- = equal sign (required in some commands).
- nnn additional characters (required in some commands).
- <cr> carriage return (ENTER key) **must** follow every command.

Commands are not executed until the carriage return is applied; therefore, any command message may be re-entered at any time prior to the carriage return. To do this, just type an '*' followed by the remainder of the command.

Command	Factory Default		Command	Factory Default		Command	Factory Default
A=	(empty)		F=	M2		S=	(ser. #)
B=	(empty)		IC	0		TO	M1CN
BP	N(9600)		ID	90	Ring	U=	1.000
C=	(empty)		ID	9000	Multi-Drop	V=	(ver.#)
D=	(empty)		M=	(psi range)		W=	100
DO	E0N		MO	X2M1		X=	0
DS	00S0		OP	ANEX		Z=	0
DU	PSI		P=	(date)			
F=	0		RR	0			

Table 5. Command Factory Default List

A= Data String A

The A= data string command can be used to store and retrieve up to eight characters in the EEPROM. This command must have 1 to 8 characters immediately following the '=' character. The message is terminated with the <cr> (ENTER key) character. The data string is automatically stored in EEPROM with this action command. Since this string is stored in EEPROM, it will remain in the HPB even after the power is turned off. Examples include dates for maintenance checks, over/under range pressure or temperature values, or key pressure readings specific to application. If the response has an '!' character instead of '=', there was an EEPROM parity error.

Note: This command will not work when a ***ddWE=RAM** continuous write enable is active.
It must be preceded by a singular write enable (***ddWE**).

Inquiry: ***ddA=**

Action: ***ddWE**
***ddA=Your_msg**

Your_msg must have 1 to 8 characters immediately following the '=' character.
The message is terminated with the <cr> character. The legal characters for *Your_msg* include all characters between the 'space' (SP) and lower case 'z' inclusive, except the '*', in standard ASCII (see last page of manual).

B= Data String B

The B= data string command can be used to store and retrieve up to eight characters in the EEPROM. This command must have 1 to 8 characters immediately following the '=' character. The message is terminated with the <cr> (ENTER key) character. The data string is automatically stored in EEPROM with this action command. Since this string is stored in EEPROM, it will remain in the HPB even after the power is turned off. Examples include dates for maintenance checks, over/under range pressure or temperature values, or key pressure readings specific to application. If the response has an '!' character instead of '=', there was an EEPROM parity error.

Note: This command will not work when a ***ddWE=RAM** continuous write enable is active.
It must be preceded by a singular write enable (***ddWE**).

Inquiry: ***ddB=**

Action: ***ddWE**
***ddB=Your_msg**

Your_msg must have 1 to 8 characters immediately following the '=' character.
The message is terminated with the <cr> character. The legal characters for *Your_msg* include all characters between the 'space' (SP) and lower case 'z' inclusive, except the '*', in standard ASCII (see last page of manual).

Inquiry: *ddC=

Action: *ddWE

*ddC=*Your_msg*

Your_msg must have 1 to 8 characters immediately following the '=' character. The message is terminated with the <cr> character. The legal characters for *Your_msg* include all characters between the 'space' (SP) and lower case 'z' inclusive, except the '*', in standard ASCII (see last page of manual).

CK Check EEPROM

The Chec**K** EEPROM command performs a checksum on both the characterization area and the configuration area of the EEPROM. This check typically takes 180 msec.

Inquiry: *ddCK

There are four possible responses for this command.

#(or?)ddCK=OK	Indicates no checksum errors
#(or?)ddCK=ERR1	Indicates a characterization area checksum error
#(or?)ddCK=ERR2	Indicates a configuration area checksum error
#(or?)ddCK=ERR3	Indicates both checksum errors

D= Data String D

The **D=** data string command can be used to store and retrieve up to eight characters in the EEPROM. This command must have 1 to 8 characters immediately following the '=' character. The message is terminated with the <cr> (ENTER key) character. The data string is automatically stored in EEPROM with this action command. Since this string is stored in EEPROM, it will remain in the HPB even after the power is turned off. Examples include dates for maintenance checks, over/under range pressure or temperature values, or key pressure readings specific to application. If the response has an '!' character instead of '=', there was an EEPROM parity error.

Note: This command will not work when a *ddWE=RAM continuous write enable is active. It must be preceded by a singular write enable (*ddWE).

Note: This data can be used to provide the last eight characters of a user provided start-up message (see the **MO** command). When used as a start-up message, any space character in the **D=** message will terminate the message. Use an underscore (_) character for spaces.

Inquiry: *ddD=

Action: *ddWE

*ddD=*Your_msg*

Your_msg must have 1 to 8 characters immediately following the '=' character. The message is terminated with the <cr> character. The legal characters for *Your_msg* include all characters between the 'space' (SP) and lower case 'z' inclusive, except the '*', in standard ASCII (see last page of manual).

DO Default Operating Parameters

The **Default Operating** command affects four modes of operation - 1) how the HPB handles a command when a parity error occurs, 2) a value that represents the number of HPBs on the ring network, 3) noise protection when running in the continuous pressure (**P4**) mode, and 4) buoy/wave filtering. (Default: **DO=E0NX**)

Inquiry: *dd**DO**

Action: *dd**WE**

EEPROM Store: *dd**WE**

*dd**DO**={**E**|**R**} or

*dd**SP**=**ALL**

*dd**DO**=*numHPBs* or

*dd**DO**={**N**|**P**}

E Execute the command in the event of a parity error.

R Reject the command in the event of a parity error.

numHPBs *Ring network configuration only* A decimal number from 0 to 9. The number 0 should be used if a single HPB is connected. When 2 or more HPB's are on the bus, the correct number is calculated by dividing the number of HPB's by 10 and rounding up to the next whole number.

N Normal operation.

P Noise protection when running in the **P4** continuous mode. This option reduces the chance that noise will cause transmission to stop during continuous **P4** pressure readings. In this mode, the HPB will respond normally to computer sent commands that are transmitted as a contiguous character string, but ignores commands that are typed in manually. In this mode, the **P4** command can only be interrupted manually by rapidly entering 3 suspend characters (\$) and an asterisk (*). Once the pressure readings have stopped, the desired command can be entered within a 5 second period. Otherwise, the continuous pressure readings will resume. **Note:** To run **P4** for a multi-dropped unit, the **TO=C** option must be set.

X Disable Buoy/Wave Filtering Algorithm

B Enable Buoy/Wave Filtering Algorithm

The HPB has a specialized feature for data buoy applications that allows the user to apply a standard wave filtering/despiking algorithm¹.

- After receiving a power-on sequence or an IN=Reset command, the HPB will take 160 pressure readings at intervals determined by the user-configured integration rate (I=). (Note: To meet the requirements outlined in the DBCP Technical document, the HPB will need to be configured to provide the 160 pressure readings at 1 reading per second. The recommended method to meet the DBCP requirements is to set I=M2 and IC=4. This will maintain high reading resolution and reduce power consumption.)⁽¹⁾
- The 160 readings will be sorted and the median of the lowest 10 readings (actually the 5th reading) will be chosen (median 1).
- All readings within 1 hPa (inclusive) of median 1 will be identified and a new median selected from this group (median 2). (Note: if an even number of readings is identified in this step, then the reading on the lower side of the median will be selected.)
- The pressure result, median 2, will be made available to all pressure commands (P1, P2, P3 and P4) after the filtering process has completed. No new pressure readings will be calculated.⁽²⁾

- To restart the filtering process, the HPB must receive an IN=Reset command or a power off/on sequence.
 - To disable the Buoy/Wave Filtering Algorithm, the HPB must receive a DO=X command, at which time normal pressure readings will resume. (Note: The Buoy/Wave Filtering Algorithm will not be activated until the DO=B configuration is made permanent by using the SP=ALL command.)⁽³⁾
- (1) The HPB will be pre-configured at the factory with the Buoy/Wave Filtering Algorithm enabled, if ordered with a “-H020” suffix. Consult the factory for other custom configurations.
 - (2) **A=, B=, C=, D=, CK, F=, I=, M=, P=, S=, U=, V=, X=, and Z=** inquiries are unavailable during the wave filtering process.
 - (3) To obtain accurate sensor temperature readings at the completion of the wave filtering algorithm, it is necessary to first send a ***ddIN** command. A ***ddIN** command will also interrupt the wave filtering algorithm and return the HPB to normal pressure readings.

¹“WOCE Surface Velocity Programme Barometer Drifter Construction Manual”, WMO-IOC, DBCP Technical Document No. 4, Authors: A.L. Sybrandy, C. Martin and P.P. Niiler (Scripps Institution of Oceanography)

DS Deadband and Sensitivity Control

The **Deadband and Sensitivity control** command allows the user to adjust the threshold value that causes a change in pressure reading. There are two options for this, **C** and **S**.

The **C** option sets the deadband to around the center of the pressure reading that moved it last. When the deadband is first set, the deadband will be split half above and half below the current reading. When the pressure exceeds either limit, the new pressure value becomes centered in the deadband limits.

The **S** option sets the deadband based on the peaks and valleys of the pressure level. For instance, when a small peak pressure is sensed, the top edge of the deadband will move to that pressure and have the entire deadband range below this value. The output reading will be one-half the deadband below this pressure (see Figure 7). As long as the pressure stays within the new deadband range the output will not change. If a pressure is sensed below this range, the deadband will move so that the bottom edge will be at that pressure and the entire deadband will be above this value.

Note: For both the **C** and **S** options, there are instances when the transmitted pressure value can be inside the deadband limits. This is due to the integration of the pressure value where multiple pressure samples are used to determine a single pressure reading. If one of the samples falls outside the deadband limits and the average of all the samples falls inside the limits then the transmitted reading will be inside the limits. To avoid this effect, set the integration time to **I=R61**, or greater. Now the transmitted pressure output will be based on a single sample.

To eliminate repetitive readings of the same pressure within the deadband set the **OP=U** command. See Figure 7 for command illustrations. (Default: **DS = 00S0**)

Note: The deadband should be set to zero when the buoy/wave filtering algorithm is enabled.

Inquiry:	*ddDS	
Action:	*ddWE	EEPROM Store: *ddWE
	*ddDS= deadband or	*ddSP=ALL
	*ddDS= Cn or	
	*ddDS= Sn	
<i>deadband</i>	0	provides no deadband
	1-60	provides deadband x 0.005% of full scale deadband limits
C	Center deadband around each new pressure output change.	
S	Deadband Spread varies with the peaks and valleys of pressure changes.	

IC Idle Count Parameter

The **Idle Count** parameter specifies the number of pressure integration times that the microprocessor skips between output values (see Fig. 8). This command is only operational for the **I=Mn** form of the Integration Time (**I=**) command. (See the **I=** command for setting integration times.) This parameter can be used to reduce the average HPB power requirement by as much as 50% when increased response time is acceptable. This parameter is also used to reduce the reply message traffic on the network bus from HPB's whose response time is not critical. (Default: **IC=0**)

Note: If **OP=W** (watchdog timer) is set, then the **IC** command will not be accepted (other than **IC=0**) and will cause an **RS** command error condition.

Inquiry: *dd**IC**

Action: *dd**WE**
*dd**IC=ICcount**

EEPROM Store: *dd**WE**
*dd**SP=ALL**

ICcount 0 to 255

where: 0 causes all integration cycles to be used.
1 causes 1 of 2 integration cycles to be used.
2 causes 1 of 3 integration cycles to be used.
3 causes 1 of 4 integration cycles to be used.
255 causes 1 of 256 integration cycles to be used.

ID Identification Number

Set the device **ID**entification number. This command is used to set a unique HPB address and/or a group address. Two sections describe this command based on the ring or multi-drop configuration of the unit. (Default: device **ID=00**, **group address=90**)

Inquiry: *dd**ID** (reply is group number for ring network units and both group number and subaddress for multi-drop network units.)

Action: *dd**WE**
*dd**ID=newNumber**

EEPROM Store: *dd**WE**
*dd**SP=ALL**

newNumber 00–99 (must enter a **TWO** digit decimal number)

where: 00 Unit numbers itself '00' (null address) and transmits the message unchanged. A ***99ID=00** will change all HPBs in network to null address (see **Note** above).
01-88 Unit numbers itself with device ID *newNumber*, increments the number by 1, and transmits the message. This will sequentially number all HPBs in a network, starting from unit *dd*, with **ID=newNumber** (see **Note** above).
89 Unit numbers itself with device ID '89', changes the number to '99', and transmits the message.
90-98 Unit assigns itself group address *newNumber*, and transmits the message unchanged.
99 Unit does not change its address, changes *newNumber* to 'ER' and transmits the message.
ER Unit does not change its address and transmits the message unchanged.

Ring Configuration only

To unassign all device IDs, send a ***99WE** and a ***99ID=00** command. In this case, all the HPB units in the network will set their device IDs to address '00', the null address.

To sequentially assign device IDs in a ring network, send a ***99ID=01** to the first unit. That unit will number itself **ID=01**, increment the command and automatically send a ***99ID=02** to the next HPB in line. This will continue down the ring until all of the HPBs have sequentially numbered themselves. The host processor will receive: ***99ID=nn**, where nn= the number of HPB units in the network plus 1. For example, if 6 HPB's are connected in a network, then a ***99ID=01** command will sequentially assign device IDs to all six units and return a ***99ID=07** to the host processor. Note that **ID=01** must be entered and not just **ID=1**. The HPBs will now be sequentially assigned device IDs from 01 to 06.

Multi-Drop Configuration only

If a multi-drop unit has the factory default identification address of 00, the HPB can not respond to group or global commands until it is assigned a valid address. This can be accomplished by one of three methods:

- 1) An identification address can be assigned off-line by connecting the HPB to a compatible serial port on a computer. The command sequence to assign address 01 is:

```
*00WE
*00ID=01
*01WE
*01SP=ALL
```

If global addressing is to be used for HPB responses, then all HPB's that are to respond to global requests should be addressed sequentially starting with address 01. See the **TO** command description for further information on multi-drop global addressing.

If group addressing is to be used for HPB responses, then all HPB's within a single group must have a group sub-addresses assigned sequentially starting with address 01. The command sequence to assign group address 91 and sub-address 01 to an HPB with identification address 03 is:

```
*03WE
*03ID=9101
*03WE
*03SP=ALL
```

See the **TO** command description for further information on multi-drop global addressing.

- 2) If the HPBs to receive ID addresses have null addresses, they can be installed on the multi-drop bus *one at a time*. After each HPB is connected, its ID address can be assigned by using the above procedure.
- 3) Any number of null addressed, or unknown addressed, HPB's can be connected to a multi-drop bus and have ID individually assigned by using their serial numbers as unique identifiers. The command sequence to assign the address 02 to a HPB with serial number 3175 is:

```
*99WE
*99S=00003175 (must use all 8 numbers)
*99WE
*99ID=02
*02WE
*02SP=ALL
```

When the identification address has been assigned, group address and sub-address can be assigned in the same manner as in 1) above.

Note: For multi-drop units, all ***9xID=** commands are ignored unless the command has been preceded by a serial number command (***99S=sssssss**) with the serial number that matches that unit. The next ***9xID** command will set that unit's device ID number.

IN Initialize HPB Microprocessor

This command **IN**itializes the HPB microprocessor. When this command is sent with the **RESET** option, it performs the same start-up function as removing and re-applying power to the HPB (exceptions to this are described in the **MO** command).

Action: *dd**IN**

This stops a continuous read operation but does not perform a power-on reset. All RAM stored parameters are retained.

Action: *dd**IN=RESET**

This stops any current operation and then performs a power-on reset. If the command has a group or global address (90-99), the message is re-transmitted before the power-on reset is activated. All RAM parameters are replaced with EEPROM stored parameters. See **MO** command for reset options.

M= Maximum Customized Full Scale

This command identifies the **Maximum** full scale pressure, in psi units, that can be user customized (see **F=** command). This value is fixed at the factory and corresponds to the full scale reference value for accuracy and error determination. If the response has an '!' character instead of '=', there was an EEPROM parity error.

Inquiry: *dd**M=**

Multi-drop Configuration only

This command is used to select the HPB alternate message header set of non-printing characters. This can be used when there is a conflict between the standard HPB message headers and the message characters used by some other components that share the bus.

To change from standard to alternate headers:

Action: *dd**WE**
*dd**M=ALT**

EEPROM Store: (ctrl \) dd**WE**
(ctrl \) dd**SP=ALL**

To change from alternate to standard headers:

Action: (ctrl \) dd**WE**
(ctrl \) dd**MM=ALT**

EEPROM Store: *dd**WE**
*dd**SP=ALL**

Standard Header		Alternate Header	ASCII Name (1)
*	becomes	ctrl \	FS
\$	becomes	ctrl]	GS
~	becomes	ctrl ^	RS
#	becomes	ctrl _	US
{	becomes	ctrl Q	DC1
}	becomes	ctrl R	DC2
!	becomes	ctrl S	DC3
@	becomes	ctrl T	DC4

Note: For example, the designator (ctrl \) indicates that the control key, "ctrl", is held down while the backslash key, "\", is typed. (1) See Table 9 for ASCII values.

MO Power-Up Mode

Sets the power-up **MOde** for the HPB. This command does not produce any immediate operational change but, when stored in the EEPROM with the **SP** command, causes the specified option(s) to be applied at power-up, at an IN=RESET command, or a watchdog timer timeout (if activated). (Default: **MO=X2M1**)

Note: User provided messages may be up to 16 characters long and may contain any information desired by the user. The message is stored in the EEPROM with the **C=** and **D=** commands. When an **M2** or **M3** power-up option is selected, a message is transmitted starting with the left most character of the **C=** string to the right most character of the **D=** string, or until a space character is encountered. Use the underscore (**_**) character in the **C=** or **D=** message if a space is desired.

Inquiry: *dd**MO**

Action: *dd**WE**

EEPROM Store: *dd**WE**

*dd**MO**={**X2|P2|P4|T2|T4**} or

*dd**SP**=**ALL**

*dd**MO**={**M0|M1|M2|M3|N0|N1|N2|N3**}

- X2** No continuous readings.
- P2** Continuous pressure readings in ASCII format.
- P4** Continuous pressure readings in binary format.
- T2** Continuous Celsius temperature readings.
- T4** Continuous Fahrenheit temperature readings.

Note: To use the **P2**, **P4**, **T2**, or **T4** commands on multi-drop units, the **TO=C** command must be set, and only for *one* unit on the bus.

	Power-up		IN=RESET or watchdog timeout	
	Message (1)	EEPROM checksum (2)	Message (1)	EEPROM checksum (2)
M0	none	no	none	no
M1(3)	factory	yes	factory	no
M2 (3)	user	no	user	yes
M3 (3)	factory	yes	user	yes
N0 (4)	none	no	none	no
N1	none	yes	none	no
N2	none	no	none	yes
N3	none	yes	none	yes

- (1) See Section 2.4 for factory message. See **C=**, **D=** for user message.
- (2) This checksum can take up to 180ms to complete. See **CK** command.
- (3) For multi-drop mode, only *one* unit should have **M1**, **M2**, or **M3** active.
- (4) Same as **M0**.

OP Operating Mode Parameters

Sets the **OP**erating mode parameters for the number of decimal places, checksum usage, and sequential read control for pressure readings. It also controls the built-in watchdog timer feature. If enabled, the watchdog timer will perform an automatic system reset, similar to an **IN=RESET** command, if the HPB becomes interrupted due to external influences. This option is useful in applications that are subject to electrical noise, power glitches, electrostatic discharges, etc., or where high reliability is required. (Default: **OP=ANEX**)

Inquiry: *dd**OP**

Action: *dd**WE**

EEPROM Store: *dd**WE**

*dd**OP**={**A|U**} or *dd**OP**={**N|C**} or

*dd**SP**=**ALL**

*dd**OP**={**E|R|S**} or *dd**OP**={**O|P|X|W**}

A Transmit all readings for sequential requests and continuous mode.

U Transmit only changed pressure readings for sequential requests and continuous mode.

Note: See **DS** command for controlling the amount of pressure deviation that is detected as a change. See **RR** command to skip identical readings. Upon receipt of a **P2** or **P4** command, the HPB will send one reading and then wait for a pressure change before sending another.

N No checksum.

C Apply an integrity Checksum to the binary format readings. When all of the characters in the message, including the header and this character, are added together (without carries) the least significant 6 bits of the resultant sum will be zero. Do not include the <cr>; that is, if you add the 6 least significant bits of the—header, 4 data, and checksum—characters, without any carries, the 6 least significant bits will be zeroes (see Table 3 for the list of characters to be used.)

E Extended form for the commands (**P3**, **P4**) using the binary format. This yields a 7 bit binary device address and a 17 bit magnitude for the pressure reading. The pressure sign is encoded in the header character. This allows up to 90,000 counts in the pressure A/D conversion cycle, and allows digital readings (**P1**, **P2**) up to a full scale value of 90,000 to use five significant digits.

R Remove header characters from **P1** and **P2** pressure readings. Provides the same function as **E** option above. In this mode, there is no device ID number or indication of out-of-range pressure condition in the **P1** and **P2** modes.

- S Signed form for the commands (**P3**, **P4**) using the binary format. This yields a 7 bit binary device address and a sign + 16 bit magnitude for data. This allows up to 60,000 counts in the pressure A/D conversion cycle. If the FS value is set above 60,000 counts, then only four significant digits will be displayed instead of five.

- O When this parameter is sent to the HPB and the power control line is either floating or held at 5V, the majority of internal HPB circuitry is immediately turned **Off** and the HPB enters micro-power state. If the power control line is at ground (0V) when the command is sent, the HPB will not enter a micro-power state until the power control line is subsequently returned to 5V. Normal operation is restored by momentarily grounding the power control pin. The **OP=O** parameter is not stored in eeprom. Also, **OP=O** is not accepted when **OP=P** is active.
- P This parameter allows the HPB micro-power state to be controlled with the **Power control line**. Holding the power control line at 0V enables normal operation. When the power control line is raised to 5V, the HPB immediately enters the micro-power state.
- X No watchdog time enabled.
- W Watchdog time enabled to reset the HPB if it should stop for ~50 msec. **Note:** if the **IC** command is set to any value other than **IC=0**, then the **OP=W** command will not set and cause a **RS** command error condition.

P= Production Date

The **Production date** command reads the factory set HPB manufactured date with format mm/dd/yy. If the response has an '!' character instead of '=', there was an EEPROM parity error.

Inquiry: *ddP=

P1 Pressure, Single, ASCII Format

The **P1** command requests a temperature compensated pressure (CP) reading in ASCII format. Refer to Table 4.2 for default decimal placement and significant digits. When in a ring network configuration and this command has a group or global address (***9d**), it is a sequential request command and the **OP=A** or **U** 'all or changes only' parameter controls the output. If this command is executed while a **P2**, **P4**, **T2**, or **T4** command is executing, then one ASCII pressure reading is transmitted and the continuous command resumes operation.

Note: If a group or global **P1** or **P3** command is sent and the pressure reading for that integration cycle has been read before, then the HPB will not send any pressure value.

Note: The HPB continuously integrates and calculates pressure and temperature readings. When this command is received, the latest available reading is transmitted if there is sufficient digital output buffer space. A group or global address command echo of ***9dP1!** indicates that digital buffer space was not available for one of the addressed HPBs.

Inquiry: *ddP1

A response of **#ddCP!0.0000** either indicates the pressure is at zero and a temperature over/under range occurred or there is an EEPROM parity error. Check **RS** for specific error. If a parity error occurred, then send a ***ddIN=RESET** command or cycle the power off and on.

A response of **#01CP=.** indicates that no pressure reading is available yet. Try again. This response can be a result of a **P1** request after a **DU**, **BP** (parity change), or **ID** action command or during the power-up cycle before valid data is available.

P2 Pressure, Continuous, ASCII Format

The **P2** command requests continuous temperature compensated pressure readings in ASCII format. The reading rate is controlled by the **IC**, **OP** and **RR** command settings. See the **DO=P** or **N** commands for the suspend readings options. In multi-drop configuration, the **TO=C** command must be set to transmit continuous readings. See the two response descriptions at the bottom of the **P1** command description.

Inquiry: ***ddP2**

Type: **\$*ddIN** or ***ddIN** To stop a single HPB from transmitting continuous pressure reading.

Type: **\$*99IN** or ***99IN** To stop the transmission of continuous readings for all HPB's on the bus.

Note: For multi-drop units, when the continuous transmit parameter is **NOT** active (is not set to **TO=C**), the **P2** command sends only *one* reading.

Note: For ring network units, type a **\$*ddIN** to stop this command. The '\$' character suspends the pressure readings while the ***ddIN** command disables the continuous output function. For multi-drop units when **TO=C**, type a ***ddIN** to stop this command.

P3 Pressure, Single, Binary Format

The **P3** command produces a single temperature compensated pressure reading in a 6 byte binary format; a 1 byte header character, 4 bytes encoded address and pressure data, and a <cr> character (see Section 5.6—Binary Format Replies). Refer to Table 1 for default decimal placement and significant digits.

When in a ring network configuration and this command has a group or global address (***9d**), it is a sequential request command and the **OP=A** or **U** 'all or changes only' parameter controls the output. If this command is executed while a **P2**, **P4**, **T2**, or **T4** command is executing, then one ASCII pressure reading is transmitted and the continuous command resumes operation.

The **OP** command also controls whether an integrity checksum is to be inserted between the last data byte and the <cr> character. See **OP** command for checksum calculation.

Note: See the two notes in **P1** command

Inquiry: ***ddP3**

Typical reply: *{@#16* Binary format compensated pressure reading from device **ID=01** is 15.478 inH₂O; refer to Table 2 and 3.

If reply is *xx???* or (Binary format compensated pressure reading not available yet,

xx_?? request again, or it has been disabled. The 'xx' is the header character and the 6 most significant bits of the address.

P4 Pressure, Continuous, Binary Format

The **P4** command produces a continuous stream of temperature compensated pressure readings in a 6 byte binary format; a 1 byte header character, 4 bytes encoded address and pressure data, and a <cr> character (see Section 5.6—Binary Format Replies). See **P3** for typical reply. See the **DO=P** or **N** commands for suspend readings from a **P4** command. The reading rate is controlled by the **IC**, **OP** and **RR** command settings. See the **DO=P** or **N** commands for the suspend readings options. In multi-drop configuration, the **TO=C** command must be set to transmit continuous readings.

The **OP** command also controls whether an integrity checksum is to be inserted between the last data byte and the <cr> character. See **OP** command for checksum calculation.

Inquiry: *ddP4

Type: \$*ddIN or *ddIN To stop a single HPB from transmitting continuous pressure reading.

Type: \$*99IN or *99IN To stop the transmission of continuous readings for all HPBs on the bus.

Note: For multi-drop units, when the continuous transmit parameter is **NOT** active (is not set to **TO=C**), the **P4** command sends only *one* reading.

Note: For ring network units, type a \$*ddIN to stop this command. The '\$' character suspends the pressure readings while the *ddIN command disables the continuous output function. For multi-drop units when **TO=C**, type a *ddIN to stop this command.

RR Reading Rate

The **Reading Rate** command specifies the number of identical readings to skip after a pressure reading has been transmitted before making another reading available. The **TO=C** command option must be set. The sensitivity to pressure changes and deadband is controlled by the **DS** command. (Default: **RR=0**)

Note: This command is only operational when **OP=U** is used.

Inquiry: *ddRR

Action: *ddWE
*ddRR=readRate

EEPROM Store: *ddWE
*ddSP=ALL

readRate 0 to 10

where: 0 Transmit every changed reading.

1-10 Requests that *readRate x 100* identical readings be skipped after each transmission. When this number has been reached, the current pressure reading is transmitted, to provide an "I am still here" confirmation.

RS Read Status

The **Read Status** command is used to determine if an error, or warning, condition has been detected by the HPB. The act of reading the **RS** command clears the error, or warning, indicators, except for EEPROM checksum errors, which require two **RS** commands to clear.

Ring Network Only:

If a sequential **RS** command is issued with the form: *9dRS, only addressed HPB's with one or more error indications in the status register will respond; e.g., if the *9dRS command is returned with no response, then no errors exist.

If a sequential **RS** command is issued with the form: *9dRS=, then all addressed HPB's respond in connected sequential order, whether an error exists or not. This form can be used to get a sequential "I am here and OK" response from all HPBs. An *9dRS! or *9dRS!= echo response indicates one or more addressed HPB's had status data to transmit but did not have sufficient buffer space due to bus traffic. The **RS** command should be re-executed.

Inquiry: *ddRS or *ddRS=

Replies: ?ddRS=pqrs (null address) #ddRS=pqrs (assigned address)

Where: p = 0 No EEPROM error
p = 1 EEPROM characterization table checksum error
p = 2 EEPROM control checksum error
p = 3 EEPROM characterization/control checksum error
p = 4 EEPROM parity error
p = 5 EEPROM parity/characterization checksum error

p = 6	EEPROM parity/control checksum error
p = 7	EEPROM parity/characterization/control error
p = 8	EEPROM parity error for A=, B=, C=, D=, M=, P=, S=, and start-up header response.
q = 0	No command error
q = 1	Command error
r = 1	Digital communications framing error
r = 2	Digital communications parity error
r = 3	Both framing and parity digital communications errors
s = 0	No temperature or pressure range errors
s = >	Over temperature condition
s = <	Under temperature condition
s = +	Over pressure condition (>1% over FS)
s = -	Under pressure condition (>1% under lower limit)
s = B	Microprocessor bandwidth warning
s = G	Internal signal noise detected, may indicate a grounding problem
s = W	Watchdog timer interrupt occurred or an IN=RESET was executed

A pressure-over-range error condition will occur when the applied pressure is greater than or equal to 1% of full scale (FS) above the FS limit. For example, if the pressure applied to a 17.6 psia unit is >17.776 psia, then an over range error condition is set. Similarly, an under range condition occurs when the applied pressure is greater than or equal to 1% FS below the minimum limit. If the temperature exceeds the limit values (-40 and 85 °C), then the over/under temperature error flag is set. The temperature output reading will remain at the limits. If there had been an **and** an under-range condition, then the first **RS** inquiry reply will be “000+”, the second will be “000-” and the third will be “0000”.

The maximum pressure reading is 105 percent of FS. This limit varies slightly from device to device but will continue to display the out-of-range indicator (“!” in place of “=”) until the pressure drops below 101 percent of FS.

Note: In the unlikely event of EEPROM checksum errors, the temperature and pressure integration cycles stop. This can be overridden by executing two **RS** commands consecutively, which clears the error indications. Pressure and temperature readings can then be taken; however, the readings may not be correct. Also, the fourth error indicator is prioritized in the order shown. When the **RS** command is issued with a group or global address (sequential mode), only HPB’s which have at least one error condition will respond. Replies are in sequential bus loop connection order, followed by the return of the **RS** command.

Out-of-range temperature has display precedence over out-of-range pressure, which in turn has precedence over microprocessor bandwidth warning, which is followed in precedence by noisy signal ground warning. The indication is cleared only if the condition no longer exists. If temperature out-of-range, pressure out-of-range, and microprocessor bandwidth warning all existed, then with successive **RS** commands, the first command would show the temperature condition, the second command would show the pressure condition, the third command would show the bandwidth warning, and the fourth command would show no error.

S= Serial Number

The Serial number command reads the factory set HPB serial number. If the response has an ‘!’ character instead of ‘=’, there was an EEPROM parity error.

Inquiry: *ddS=

Multi-Drop type only

In multidrop bus configuration only this command must be used to identify a HPB for address assignment. Command *99S=sssssss, where sssssss is the 8 character serial number of the HPB (in this case the leading zeros of the serial number must be used because the identification match is made on all 8 ASCII characters—not the decimal value of the serial number), identifies the HPB for identification address assignment. The address assignment is then performed by a *99IDnn command, where nn is the address.

Note: If two HPB units on a multi-drop bus have the same ID then you can use the sequence below to re-assign ID numbers

Action: ***99WE**
***99S=sssssss** (this allows the HPB to accept the next ***99ID** command)
***99WE**
***99ID=nn** (this assigns the HPB #sssssss the ID number 'nn')

Where: *sssssss* is the HPB serial number with sufficient leading zeros to provide 8 characters.

SI Synchronize Integration Cycles

Multi-drop type only

The Synchronize Integration command is used to control the start of a HPB's pressure integration cycle. When used with group or global addressing on an multi-drop bus, this command simultaneously starts the pressure integration cycles of all addressed HPBs on the bus. The results of pressure integration cycles completed *prior* to the execution of this command are either preserved for reading or discarded, depending on the operational configuration specified by the **TO=C**, **A**, **S**, or **H** command. The new integration cycle (**I=**) begins immediately following the carriage return (<cr>) entry of the **SI** command. See Figure 9 for command illustration.

Action: ***ddSI**

Setting: When an **SI** command is sent:

TO=C, or **A** Restart **I=** cycle

TO=S Restart **I=** cycle, Clear previous **I=** value

TO=H Restart **I=** cycle, Clear previous **I=** value, Stop after 1 **I=** cycle

SP Store Parameters in EEPROM

The Store Parameters command causes all control parameter(s) to be stored in the EEPROM so they are available when power is applied. Only changes are updated, and if an update is made, the control parameter EEPROM checksum is automatically recalculated.

Note: This command will not work when a ***ddWE=RAM** continuous write enable is active. It must have a singular write enable (***ddWE**) command preceding it.

Action: ***ddWE**
***ddSP=All** Writes all parameters to EEPROM.

T1 Temperature, Single, °C

The **T1** command requests a single temperature reading in degrees Celsius. The reading resolution is 0.1 degrees C. When this command has a group or global address, it is a sequential request command. (Factory default is °C, after that, the default will be the last reading type, °C or °F, which is stored in EEPROM during a **SP=ALL** command.)

A response of **#0ICT=.** indicates that no temperature reading is available or the last reading was in Fahrenheit. If the last reading was in Fahrenheit, then it will take two inquiries to get the first reading. Successive readings in Celsius only take one inquiry.

A group or global address command echo of ***9dT1!** indicates that digital buffer space was not available for one or more of the addressed HPBs.

Note: The HPB continuously integrates and calculates pressure and temperature readings. When this command is received, the latest available reading is transmitted if there is sufficient output buffer space.

Inquiry: ***ddT1**

T2 Temperature, Continuous, °C

The **T2** command requests continuous temperature readings in degrees Celsius. Reading rate is controlled by the **IC** command setting. The reading resolution is 0.1 degrees C. (Default - see **T1** command)

Inquiry: *dd**T2**

Type: **\$*99IN** To stop the continuous temperature reading command.

Note: For multi-drop units, when the continuous transmit parameter is **NOT** active (is not set to **TO=C**), the **T2** command sends only *one* reading.

Note: For ring network units, type a **\$*99IN** to stop this command. The ‘\$’ character suspends the temperature readings while the ***99IN** command disables the continuous output.

T3 Temperature, Single, °F

The **T3** command requests a single temperature reading in degrees Fahrenheit. The reading resolution is 0.1 degrees F. (Factory default is °C, after that, the default will be the last reading type, °C or °F, which is stored in EEPROM during a **SP=ALL** command.)

A response of **#01FT=.** indicates that no temperature reading is available or the last reading was in Celsius. If the last reading was in Celsius, then it will take two inquiries to get the first reading. Successive readings in Fahrenheit will only take one inquiry.

A group or global address command echo of ***9dT1!** indicates that digital buffer space was not available for one or more of the addressed HPBs.

Note: The HPB continuously integrates and calculates pressure and temperature readings. When this command is received, the latest available reading is transmitted if there is sufficient output buffer space.

Inquiry: *dd**T3**

T4 Temperature, Continuous, °F

The **T4** command requests continuous temperature readings in degrees Fahrenheit. The reading rate is controlled by the **IC** command setting. The reading resolution is 0.1 degrees F. (Default - see **T1** command)

Inquiry: *dd**T4**

Type: **\$*ddIN** or ***ddIN** To stop a single HPB from transmitting continuous temperature reading.

Type: **\$*99IN** or ***99IN** Stops the transmission of continuous pressure reading for all HPBs on the bus.

Note: For multi-drop units, when the continuous transmit parameter is **NOT** active (is not set to **TO=C**), the **T4** command sends only *one* reading.

Note: For ring network units, type a **\$*99IN** to stop this command. The ‘\$’ character suspends the temperature readings while the ***99IN** command disables the continuous output.

U= User Supplied Display Units

The User supplied display units command allows the user to enter units of measure for the HPB. The value entered for this command is multiplied by the actual pressure in psi to get the user defined units. For example, if `***ddU=15.0**<cr>`, then the compensated pressure output values will be 15 times the actual psi value. This function (multiplier) is activated by executing the ***ddDU=USER**<cr> command. If there is an input error, then the command error flag in the **RS** command will be set and no change will occur. (Default: **U=1.0000**)

Inquiry: ***ddU**=

Action: ***ddWE**

***ddU=UserValue**

EEPROM Store: ***ddWE**

***ddSP=ALL**

UserValue Must be a value between 0.0010000 and 999.99. It is advisable to confirm the setting by executing a ***ddU**=<cr> command after the **U**= setting is established. The user supplied display function is activated by executing the ***ddWE** followed by the ***ddDU=USER**<cr> command.

V= Version Number

This Version number command transmits the factory set software version number.

Inquiry: ***ddV**=

Reply: #01**V**=H2.4E2Mnn

H2.4E2 Firmware version number

M or R Multi-drop or ring network

nn Unused

WE Write Enable to EEPROM or RAM

The Write Enable command enables an EEPROM write or a RAM write operation. It is used as a safeguard to prevent erroneous command sequences from changing the HPB configuration. A ***ddWE** command must immediately precede the **SP**, **A**=, **B**=, **C**= or **D**= commands when storing information in the EEPROM. The ***ddWE** command must also immediately precede any command that changes the configuration parameters in the RAM. When manually making multiple configuration changes, ***ddWE=RAM** command form may be used to permanently enable RAM updates until the next ***ddWE** or ***ddWE=OFF** command is executed.

Note: The ***ddWE** command remains active until the next '*' followed by a <cr> is received, or a '*9.<cr>' passes through from a group or global addressed command.

Action: ***ddWE**

This enables the next command to write to the RAM or EEPROM, and also disables the ***ddWE=RAM** condition after the next command is received.

Action: ***ddWE=RAM**

This provides a permanent RAM write enable. All commands following a ***ddWE=RAM** will be stored in RAM. A ***ddWE** command will disabled, or deactivate, this permanent RAM write enable. The ***ddWE=RAM** command will not allow the **SP** command to write to EEPROM

Action: ***ddWE=OFF**

This immediately disables the ***ddWE=RAM** condition.

X= Slope 1 User Compensation Control

The user can adjust the pressure vs. output curve using the X=, and Z= commands. The X= command adjusts the slope of the pressure output curve for positive pressures. The range of adjustment is $\pm 0.6\%$ FS in 0.005% increments. Use the modified full scale value if the F= command is set. If there is an input error, then the command error flag in the RS command will be set and no change will occur. See Section 4.4 for command illustration. (Default: X=0)

Inquiry: *ddX=

Action: *ddWE
*ddX=pp

EEPROM Store: *ddWE
*ddSP=ALL

pp 0 to ± 120 This number adjusts the pressure reading by multiplying it by 0.005% and scaling the slope of the pressure reading before output.

$$\text{Pressure Output} = [1 + (\text{pp} \times 0.00005)] \times \text{Pressure Reading}$$

Z= Offset—User Compensation Control

The user can adjust the pressure vs. output curve using the X= and Z= commands. The Z= command adjusts the offset of the pressure output curve. The range of adjustment is $\pm 0.6\%$ FS in 0.005% increments. Use the customized full scale value (F=) as a multiplier.

If there is an input error, then the command error flag in the RS command will be set and no change will occur. See Section 4.4 for command illustration. (Default: Z=0)

Inquiry: *ddZ=

Action: *ddWE EEPROM Store: *ddWE
*ddZ={pp|CAL} *ddSP=ALL

pp 0 to ± 120 This number adjusts the pressure reading by adding (pp x 0.005% FS) to the reading before outputting.

$$\text{Pressure Output} = [(\text{pp} \times 0.00005) \times (\text{M= full scale})] + \text{Pressure Reading}$$

CAL Sets the zero pressure condition to zero output. Offset is calculated and stored, then applied to all readings thereafter. Set Z=0 to cancel. The range of correction for the CAL command is the same as pp described above. If the correction is out of range, then the Z= parameter will be set to a maximum value (+120 or -120).

Note: When the Z=CAL command is executed and there is a deadband (DS) set, the output may not read zero when it actually is. To read zero pressure, turn the deadband off (DS=0).

\$ Suspend Continuous Readings

This is not actually a command but a special command header character. During a continuous pressure reading command, P2 or P4 in ring configuration, a '\$' by itself will temporarily stop, or suspend, transmission. Pressure readings will continue to be taken at the configured rate but will not be transmitted on the digital outputs. This allows for manual entry of a command when continuous readings are filling the display. Pressure reading transmission will resume when the <cr> carriage return (ENTER key) is pressed.

Note: Under some conditions it is possible to enter a command that will not cause continuous readings to resume after entering the <cr> character, in which case a second <cr> will cause the continuous readings to resume.

Example: *ddP2 (Start continuous pressure readings)

\$*ddV= (Suspend continuous pressure readings to read version number)
(Resume continuous pressure reading after the V= reply)

6.0 ELECTRICAL CONNECTIONS

HPB Signal Name

- 1 Transmit
- 2 Receive
- 3 Case Ground
- 4 Common Ground (GD)
- 5 DC Power In
- 6 Power Control




HPB Connector
(pins - top view of HPB)

HPB Mating Connector

Conxall (Switchcraft) P/N 6282-6SG-3XX Newark Stock no. 89F4115

Figure 14. HPB Electrical Connector Pin Assignments

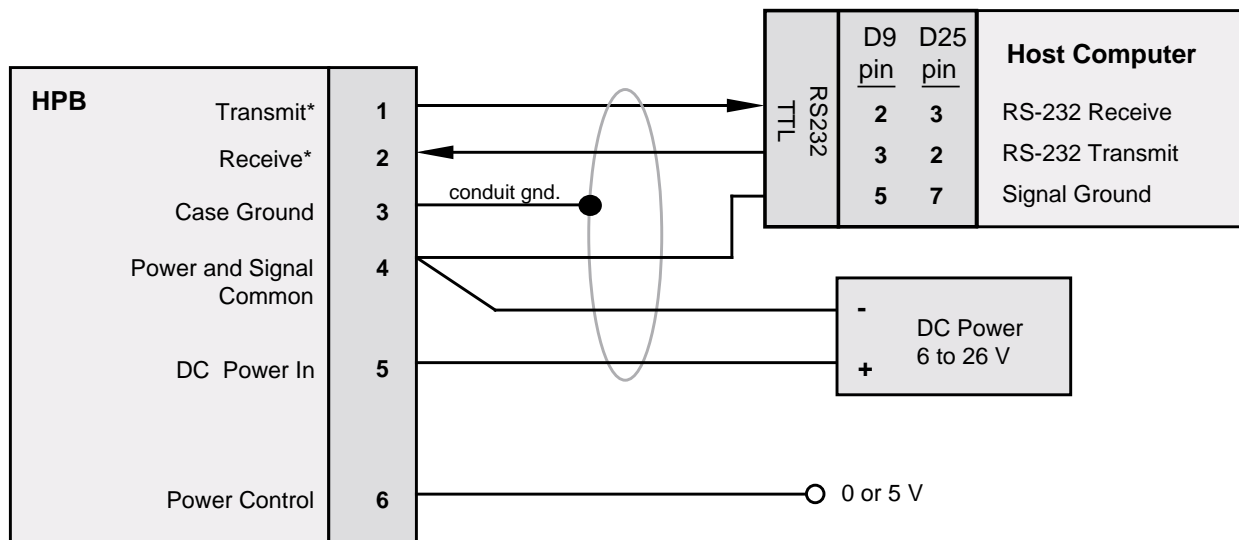

*TTL Signal Levels


Make all common connections at this end of the cable

Note: If computer signal ground is tied to conduit ground, do not ground power supply output. (Common system should be grounded at only one point)

Figure 15. Connection to a Host Computer

7.0 TIMING DIAGRAMS

For the factory default settings, the HPB will respond to a **P1** or **P3** pressure reading with an integration time of 200 msec at 9600 baud data output. The timing for this is shown Figure 16. The command input time, **Y**, is the transmission time for the command message. This is equal to the number of command characters plus the <cr> character, times the baud transmission time per byte ($*01P1<cr> = 6 \times (\text{byte times})$). The integration and calculation times are internal HPB times. The integration time is user controlled with the **I=** command. The digital pressure reading output time, **X**, is the reply transmission time. Character, byte or transmission times for different baud rates are listed in Table 7. Reply character lengths, **X**, are listed in Table 8.

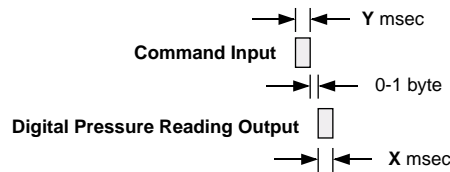


(See Tables 7 and 8 for X times)

Figure 16. Default Single Pressure Reading Timing Diagram

When I=Mn mode or I=R30 (or less) mode:


For continuous pressure reading commands (**P2** and **P4**), the HPB internal times and the output timing are shown Figure 17.

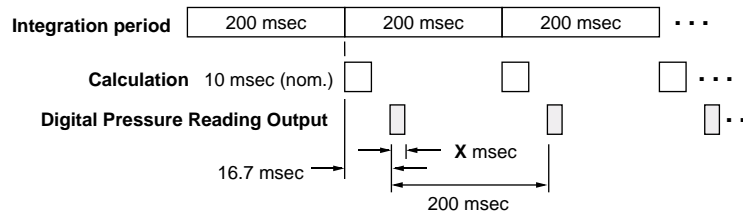

(See Tables 7 and 8 for X times)

Figure 17. Default Continuous Pressure Reading Timing Diagram


For continuous pressure reading commands (**P2** and **P4**) and an **IC=1** setting, the HPB internal times and the output timing are shown Figure 18.

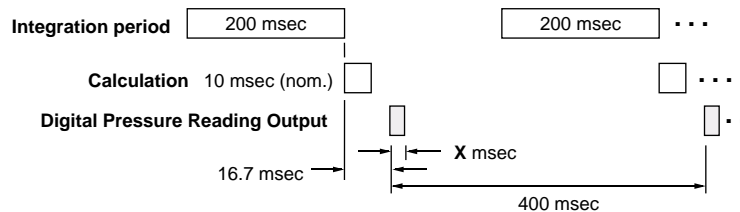

(See Tables 7 and 8 for X times)

Figure 18. Continuous Pressure (with IC = 1) Timing Diagram

Shown below in Figures 19 to 21 are the timing diagrams for faster pressure output rates - up to 120 readings/second. These rates are achieved by setting the integration time (**I=**) command. For the continuous reading commands **P2** and **P4**, three pressure output timing figures are shown below.

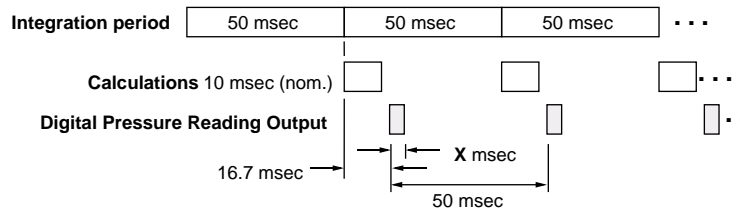


(Integration Time = 50 msec, I=R20)

(See Tables 7 and 8 for X times)

Figure 19. Timing Diagram for 20 Readings Per Second


When I=R31 (or more) mode:

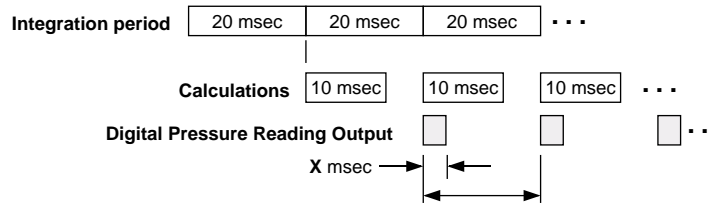

(Integration Time = 20 msec, I=R50)

(See Tables 7 and 8 for X times)

Figure 20. Timing Diagram for 50 Readings Per Second

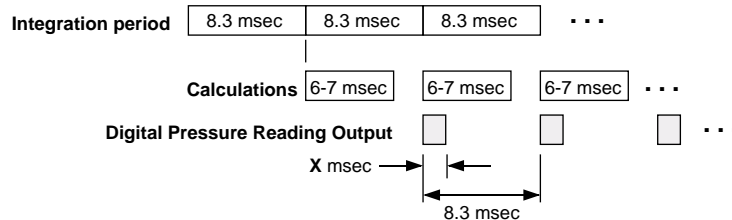

(Integration Time = 8.3msec, I=R120)

(See Tables 7 and 8 for X times)

Figure 21. Timing Diagram for 120 Readings Per Second

Baud Rate (bps)	Time/Character (msec) ⁽¹⁾
1200	8.33
2400	4.17
4800	2.08
9600	1.04
14400	0.694
19200	0.521
28800	0.347

(1) Time is same for No, Even, or Odd parity selection

Table 7. Transmission Times at Selected Baud Rates

Reply from:	Number of Characters ⁽¹⁾	Format
P3, P4 no checksum	6	Binary
P3, P4 with checksum	7	Binary
P1, P2 min. length	12	ASCII
P1, P2 max. length	16	ASCII
T1, T2, T3, T4	12	ASCII
Other Replies	11	ASCII

(1) Includes <cr> character

Table 8. Number of bytes in Various Replies

Two command examples for calculating the digital transmission times are shown below. These examples are for 9600 baud selection.

	Message	# of Characters	Transmission Time
ASCII			
Inquiry:	*23P1<cr>	6	6.24 msec
Reply:	#23CP=-16.437<cr>	14	16.64 msec
Binary			
Inquiry:	*23P3<cr>	6	6.24 msec
Reply:	^@PSA	6	6.24 msec

8.0 SPECIFICATIONS

SPECIFICATIONS	HPB	HPA
Pressure Range ⁽²⁾	500-1200 hPa (Note: 1 hPa = 1 mBar)	0 - 17.6 psia
Overpressure ⁽³⁾	4150 hPa	60 psia
Burst Pressure ⁽⁴⁾	48 x 10 ³ hPa	700 psia
Operating Temperature Range ⁽⁵⁾	-40 to 85°C (-40 to 185°F)	
Storage Temperature Range	-55 to 90°C (-67 to 194°F)	
Media Compatibility	Suitable for non-condensing, non-corrosive, non-combustable gasses	
Accuracy over Operating Temperature Range ⁽¹⁾		
	HPB100 and HPA100 HPB200 and HPA200	± 0.06% FS ± 0.03% FS
Stability	0.25 hPa per year	0.02% FS per year
Resolution	0.0011% FS	
Temperature Readings	Within +/- 1.0 C (at sensing element)	
Outputs	TTL ⁽⁷⁾ (user configurable for either multi-drop or ring networking)	
Power Requirements	6 to 26 VDC, 5-9mA depending upon configuration	
Weight	5 oz. (142g)	
Bus Addressing	Unique addresses 1 - 89, user assignable	
Baud Rate	1200, 2400, 4800, 9600, 14400, 19200, 28800	
Pressure Units	atm, bar, cmwc, ftwc, hPa, inHg, inwc, Kg/cm, KPa, mBar, mmHg, MPa, mwc, psi user, lcom, pfs	
Response Delay	Delay in ms = (1000/update rate) + 1ms ⁽⁶⁾ or 17ms, whichever is greater.	
Sample Rate	8.33mS to 51.2 minutes per update	
Mechanical Shock	1500 G for 0.5 msec half sine (per MIL-STD-833D, M2002.3, Cond B)	
Thermal Shock	24 cycles from -55 to +90°C (-67 to 194°F), 1 hr cycles	
Vibration	0.5 in. or 20 G's, 20 Hz to 2 KHz (per MIL-STD-833D, M2007.2, Cond A)	
Humidity Sensitivity	Negligible	
Acceleration Sensitivity	Negligible	

(1) Sum of worst case linearity, repeatability, hysteresis, thermal effects, and calibration errors from -40 to 85°C.
Consult Honeywell for other accuracy options.

(2) Consult Honeywell for other pressure ranges.

Note: HPB units meet accuracy specifications over 500 - 1200 hPa pressure range. HPB units are fully characterized and will provide digitally compensated pressure values over the entire 0-1200 hPa range.

(3) Exposure to overpressure will not permanently affect calibration or accuracy of the unit.

(4) Exceeding burst pressure rating may result in media escape.

(5) Consult Honeywell for other temperature ranges.

(6) The user-selectable update rates vary between 8.33 ms and 12 sec. Time to first reading is 150 ms.

(7) Unit default is multi-drop. Can be user-configured to ring networking.

• **Digital Output:**


Baud Rates: 1200, 2400, 4800, **9600**, 14400, 19200, 28800
Data Framing: 1 start bit, 8 data bits, 1 stop bit
Parity: **No parity**, even parity or odd parity
Handshaking: Not supported
Addressing: 89 individual (self numbering, or user assigned)
9 group addresses (multicast)
1 global address (broadcast)
1 null address (address not assigned)
Bus Operating Modes: Response to a designated unit request.
Sequential response to selected units request.
Sequential response by all units to a single request.
Continuous response by any (or all for ring network) units

• **Pressure Units:**


Digital: psi, hPa, mbar, bar, kPa, MPa, in. Hg, mm Hg (torr), in. wc,
ft. wc, m wc, cm wc, kg/cm², atm, LCOM, %FS, or user defined.
(wc=water column @ 4°C, Hg @ 0°C)

9.0 DIMENSIONS

DIMENSIONS ARE IN INCHES (CENTIMETERS)

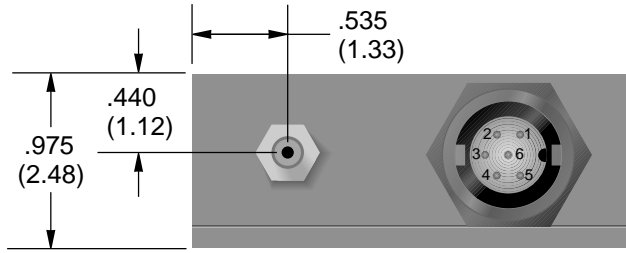

HBP/A	Signal name
1	TTL XMIT
2	TTLRCV
3	Case Ground
4	Circuit Common
5	Power Supply(+)
6	Power Control

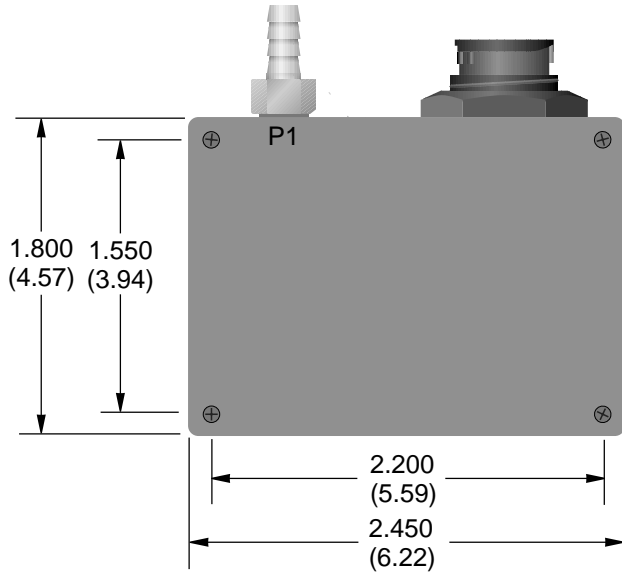

Mounting Holes: #4-40 x ∇ .500 (1/27)
4 places, back side only

Figure 22. HPB Case Outline

Figure 23. Electrical Connector

DEC	HEX	ASCII	KEY	DEC	HEX	ASCII	DEC	HEX	ASCII	DEC	HEX	ASCII
0	00	NUL	ctrl @	32	20	SP	64	40	@	96	60	`
1	01	SOH	ctrl A	33	21	!	65	41	a	97	61	a
2	02	STX	ctrl B	43	22	“	66	42	B	98	62	b
3	03	ETX	ctrl C	35	23	#	67	43	C	99	63	c
4	04	EOT	ctrl D	36	24	\$	68	44	D	100	64	d
5	05	ENQ	ctrl E	37	25	%	69	45	E	101	65	e
6	06	ACK	ctrl F	38	26	&	70	46	F	102	66	f
7	07	BEL	ctrl G	39	27	‘	71	47	G	103	67	g
8	08	BS	ctrl H	40	28	(72	48	H	104	68	h
9	09	HT	ctrl I	41	29)	73	49	I	105	69	i
10	0A	LF	ctrl J	42	2A	*	74	4A	J	106	6A	j
11	0B	VT	ctrl K	43	2B	+	75	4B	K	107	6B	k
12	0C	FF	ctrl L	44	2C	,	76	4C	L	108	6C	l
13	0D	<cr>	ctrl M	45	2D	-	77	4D	M	109	6D	m
14	0E	SO	ctrl N	46	3E	.	78	4E	N	110	6E	n
15	0F	SI	ctrl O	47	2F	/	79	4F	O	111	6F	o
16	10	DLE	ctrl P	48	30	0	80	50	P	112	70	p
17	11	DC1	ctrl Q	49	31	1	81	51	Q	113	71	q
18	12	DC2	ctrl R	50	32	2	82	52	R	114	72	r
19	13	DC3	ctrl S	51	33	3	83	53	S	115	73	s
20	14	DC4	ctrl T	52	34	4	84	54	T	116	74	t
21	15	NAK	ctrl U	53	35	5	85	55	U	117	75	u
22	16	SYN	ctrl V	54	36	6	86	56	V	118	76	v
23	17	ETB	ctrl W	55	37	7	87	57	W	119	77	w
24	18	CAN	ctrl X	56	38	8	88	58	X	120	78	x
25	19	EM	ctrl Y	57	39	9	89	59	Y	121	79	y
26	1A	SUB	ctrl Z	58	3A	:	90	5A	Z	122	7A	z
27	1B	ESC	ctrl [59	3B	;	91	5B	[123	7B	{
28	1C	FS	ctrl \	60	3C	,	92	5C	\	124	7C	
29	1D	GS	ctrl]	61	3D	=	93	5D]	125	7D	}
30	1E	RS	ctrl ^	62	3E	>	94	5E	^	126	7E	~
31	1F	US	ctrl _	63	3F	?	95	5F	_	127	7F	DEL

*ASCII - American Standard for Coded Information Interchange

Table 9. ASCII Conversion Table, Decimal to Hexadecimal

EIA-2323-E or RS-232	Pin # DB-25	Pin # DB-9
Shield	1	
Transmit Data (TD)	2	3
Receive Data (RD)	3	2
Request to Send (RTS)	4	7
Clear to Send (CTS)	5	8
DCE Ready (DSR)	6	6
Signal Ground (SG)	7	5
Received Line Signal Detector (DCD)	8	1
DTE Ready (DTR)	20	4
Ring Indicator	22	9

Table 10. RS-232 Standard Pin Connections

Customer Service Representative

(800) 323-8295 fax: (763) 954-2257

E-Mail: ssec.customer.service@honeywell.com

Web Site: www.ssec.honeywell.com

No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of Honeywell, Inc. Honeywell reserves the right to make changes to any products or technology herein to improve reliability, function or design. Honeywell does not assume any liability arising out of the application or use of any product or circuit described herein; neither does it convey any license under its patent rights nor the rights of others.

©Copyright 2001 Honeywell Inc., All rights reserved. Printed in U.S.A.

Honeywell International
Solid State Electronics Center
12001 State Highway 55
Plymouth, MN 55441
800-323-8295
FAX (763) 954-2257